

01234567890123456789  
01234567890123456789  
01234567890123456789

\*\* RSX-11M V3.2 \*\*  
\*\* RSX-11M V3.2 \*\*  
\*\* RSX-11M V3.2 \*\*

DK3:[140,6]RELNOTES.736;10  
COPY 1 OF 1  
DELETION NOT SPECIFIED

9-MAY-83 16:36:46  
9-MAY-83 16:36:46  
9-MAY-83 16:36:46

01234567890123456789  
01234567890123456789  
01234567890123456789

RRRRRRRR	EEEEEEEEEE	LL	NN	NN	000000	TTTTTTTTTT	EEEEEEEEEE	SSSSSSSS	
RRRRRRRR	EEEEEEEEEE	LL	NN	NN	000000	TTTTTTTTTT	EEEEEEEEEE	SSSSSSSS	
RR RR	EE	LL	NN	NN	00 00	TT	EE	SS	
RR RR	EE	LL	NN	NN	00 00	TT	EE	SS	
RR RR	EE	LL	NNNN	NN	00 00	TT	EE	SS	
RR RR	EE	LL	NNNN	NN	00 00	TT	EE	SS	
RRRRRRRR	EEEEEEEE	LL	NN	NN	NN	00 00	TT	EEEEEEEE	SSSSSS
RRRRRRRR	EEEEEEEE	LL	NN	NN	NN	00 00	TT	EEEEEEEE	SSSSSS
RR RR	EE	LL	NN	NNNN	00 00	TT	EE	SS	
RR RR	EE	LL	NN	NNNN	00 00	TT	EE	SS	
RR RR	EE	LL	NN	NN	00 00	TT	EE	SS	....
RR RR	EE	LL	NN	NN	00 00	TT	EE	SS	....
RR RR	EEEEEEEEEE	LLLLLLLLLL	NN	NN	000000	TT	EEEEEEEEEE	SSSSSSSS	....
RR RR	EEEEEEEEEE	LLLLLLLLLL	NN	NN	000000	TT	EEEEEEEEEE	SSSSSSSS	....

77777777	333333	666666	;;;;	11	000000
77777777	333333	666666	;;;;	11	000000
77	33	33	66	1111	00 00
77	33	33	66	1111	00 00
77		33	66	11	00 0000
77		33	66	11	00 0000
77		33	66666666	11	00 00 00
77		33	66666666	11	00 00 00
77		33	66 66	11	0000 00
77		33	66 66	11	0000 00
77	33	33	66 66	11	00 00
77	33	33	66 66	11	00 00
77	333333	666666	;;	111111	000000
77	333333	666666	;;	111111	000000

01234567890123456789  
01234567890123456789  
01234567890123456789

\*\* RSX-11M V3.2 \*\*  
\*\* RSX-11M V3.2 \*\*  
\*\* RSX-11M V3.2 \*\*

DK3:[140,6]RELNOTES.736;10  
COPY 1 OF 1  
DELETION NOT SPECIFIED

9-MAY-83 16:36:46  
9-MAY-83 16:36:46  
9-MAY-83 16:36:46

01234567890123456789  
01234567890123456789  
01234567890123456789

\*\*\*\*\*  
\*\*\*\*\*

RELEASE NOTES -- 736Q                    ver. 5-10-83

The following summarizes the change(s) to the switch settings on the 736Q and the (different) operating modes incorporated in the firmware of this date.

Front Panel DIP switches -- operational control and additional configuration

Switch ON-toward front (OFF-toward rear)

switch 10            enables (disables) Left Margin Procedure

Left Margin Procedure

This procedure allows the operator to change the Left Margin from the front panel during the FIRST HOLD PRINT following power-up. (See 736Q--RPQ--Left Margin Set.)

Switch Status

Since the new version of HOLD is incorporated in this version, the HOLD will return "Switch Transition" to the control unit at the completion of the FIRST HOLD PRINT if switches 1, 2, & 3 are set to other than 6LPI, MONO, SINGLE.

Attachment

1. 736Q--RPQ--Left Margin Set

May 9, 1983

\*\*\*\*\*  
\*\*\*\*\*