
INSTRUCTION MANUAL

MODELS 180 AND 180 LF SWEEP/FUNCTION GENERATORS



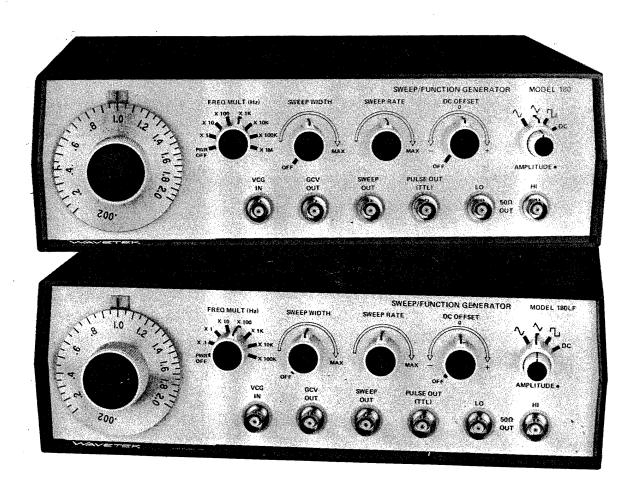

WARRANTY

All Wavetek instruments are warranteed against defects in material and workmanship for a period of one year after date of manufacture. Wavetek agrees to repair or replace any assembly or component (except batteries) found to be defective, under normal use, during this period. Wavetek's obligation under this warranty is limited solely to repairing any such instrument which in Wavetek's sole opinion proves to be defective within the scope of the warranty when returned to the factory or to an authorized service center. Transportation to the factory or service center is to be prepaid by purchaser. Shipment should not be made without prior authorization by Wavetek.

This warranty does not apply to any products repaired or altered by persons not authorized by Wavetek, or not in accordance with instructions furnished by Wavetek. If the instrument is defective as a result of misuse, improper repair, or abnormal conditions or operations, repairs will be billed at cost.

Wavetek assumes no responsibility for its product being used in a hazardous or dangerous manner either alone or in conjunction with other equipment. High voltage used in some instruments may be dangerous if misused. Special disclaimers apply to these instruments. Wavetek assumes no liability for secondary charges or consequential damages and, in any event, Wavetek's liability for breach of warranty under any contract or otherwise, shall not exceed the purchase price of the specific instrument shipped and against which a claim is made.

Any recommendations made by Wavetek for use of its products are based upon tests believed to be reliable, but Wavetek makes no warranty of the results to be obtained. This warranty is in lieu of all other warranties, expressed or implied, and no representative or person is authorized to represent or assume for Wavetek any liability in connection with the sale of our products other than set forth herein.

INSTRUCTION MANUAL

MODELS 180 AND 180 LF SWEEP/FUNCTION GENERATORS



CONTENTS

SECTION 1	GENERAL DESCRIPTION
	1.1 THE MODELS 180 AND 180LF
SECTION 2	INITIAL PREPARATION
	2.1 UNPACKING INSPECTION
SECTION 3	OPERATION
SECTION 4	3.1 CONTROLS AND CONNECTORS 3- 3.1.1 Power/Frequency Controls 3- 3.1.2 Amplitude Controls 3- 3.1.3 Function Selections 3- 3.1.4 Sweep Controls 3- 3.2 OPERATION 3- 3.2.1 Signal Termination 3- 3.2.2 Manually Controlled Operation 3- 3.2.3 Voltage Controlled Operation 3- 3.2.4 Sweep Generator Operation 3- CIRCUIT DESCRIPTION
	4.1 VOLTAGE CONTROLLED GENERATOR (VCG) 4-1 4.2 FREQUENCY CONTROL 4-1 4.3 WAVEFORM OUTPUT 4-2 4.4 SWEEP CIRCUITS 4-2 4.5 CRYSTAL CONTROL 4-2
SECTION 5	CALIBRATION
	5.1 FACTORY REPAIR. 5-1 5.2 REQUIRED TEST EQUIPMENT 5-1 5.3 REMOVING GENERATOR COVER 5-1 5.4 CALIBRATION 5-1
SECTION 6	TROUBLESHOOTING
	6.1 FACTORY REPAIR
SECTION 7	PARTS AND SCHEMATICS
	7.1 DRAWINGS

SECTION GENERAL DESCRIPTION

1.1 THE MODELS 180 AND 180LF

The Wavetek Model 180 Sweep/Function Generator is a precision source of sine, triangle, and square waveforms. Frequency of the waveforms is manually and remotely variable from 0.1 Hz to 2 MHz. The generator can repetitively sweep from one frequency to a higher frequency, with controllable rate and range of sweep. Amplitude of the waveforms is variable from 10V peak-to-peak into 50Ω down to 30 mV p-p. DC reference of the waveforms can be offset positively and negatively.

A voltage representing generator frequency, a fixed amplitude pulse train of that frequency, and a voltage ramp representing frequency sweep rate are provided as front panel outputs.

The Wavetek Model 180LF (Low Frequency) Sweep/Function Generator is identical to the Model 180 except for frequency range: 0.01 Hz to 200 kHz.

1.2 SPECIFICATIONS

The specifications (available waveforms, frequencies, and amplitudes), operating modes, precision (accuracy), and purity (quality) are listed in the following paragraphs.

1.2.1 Versatility

Output Signals

Sine \wedge , triangle \wedge , square \square , TTL pulse \square , ramp \nearrow and DC.

Control

Generator operates in continuous and sweep modes. Frequency controlled manually or with external voltage.

Frequency Range

0.1 Hz to 2 MHz (180); 0.01 Hz to 200 kHz (180LF).

Operating Frequency Ranges

X1.						. 0.1 Hz to 2 Hz
X 10 .						0.1 Hz to 20 Hz
X 100						0.2 Hz to 200 Hz
X 1K.						. 2 Hz to 2 kHz

X 10K	•			•			. 20 Hz to 20 kHz
X 100K							. 200 Hz to 200 kHz
X 1M.							2 kHz to 2 MHz
Model 1	80L	F:					
X .1 .							. 0.01 Hz to 0.2 Hz
X1.							0.01 Hz to 2 Hz
X 10 .							. 0.02 Hz to 20 Hz
X 100							. 0.2 Hz to 200 Hz
X 1K.							2 Hz to 2 kHz
X 10K							. 20 Hz to 20 kHz
X 100K							. 200 Hz to 200 kHz

Main Output

Sine, triangle and square waveforms and DC are selectable. HI (0 dB) and LO (-20 dB) BNC outputs are available for simultaneous usage; outputs may be varied to HI (-30 dB) and LO (-50 dB) by amplitude control. HI output provides 20V peak-to-peak max open circuit (10V peak-to-peak max into 50Ω load). LO output provides 1V peak-to-peak max into 50Ω load. Both output impedances are 50Ω .

DC Offset and DC Output

DC offset of waveform and DC output selectable and variable through HI and LO BNC outputs. HI output $\pm 10V$ max ($\pm 5V$ into 50Ω load) as offset or Vdc output. LO output $\pm 1V$ max into 50Ω load as offset or Vdc output. Waveform offset limited to ± 10 Vp HI and ± 1 Vp LO (both open circuit voltages).

Pulse Output

TTL pulse (50% duty cycle) at generator frequency. Drives up to 20 TTL loads.

GCV Output

0 to +2V (nominal, open circuit) proportional to frequency of main generator. Output impedance $600\Omega.$

VCG - Voltage Controlled Generator Input

VCG voltage as well as control settings select generator frequency. Frequency may be dc-programmed or ac-modulated by external 0 to 2V signal. Input impedance is $2\,k\Omega$. VCG input can change generator output 1000:1 on all ranges except X 10 Hz and X 1 Hz ranges (Model 180) and X 1 Hz and X .1 Hz (Model 180LF).

VCG Input Signal Bandwidth: 100 kHz.

VCG Slew Rate: 0.1V/μs.

Sweep Output

Ramp waveform output with 5V peak into open circuit. Output impedance $600\Omega_{\cdot}$

1.2.2 Operating Modes

Continuous

Operates as standard VCG. Frequency of main generator determined by dial/range setting and VCG input voltage.

Sweep

Main generator is frequency modulated by internal sweep generator. When swept, main generator frequency rises from frequency set by the dial and range setting to a frequency set by sweep width control.

Sweep Rate: 30 ms to 20s (nominal) continuously adjustable by single turn control on front panel.

Sweep Width: Up to 1:1000 adjustable on all ranges except X 1 Hz and X 10 Hz ranges (Model 180) and X .1 Hz and X 1 Hz (Model 180LF).

1.2.3 Horizontal Precision

Dial Accuracy

Model 180: $\pm 3\%$ of full scale for 0.1 Hz to 2 MHz. Model 180LF: $\pm 3\%$ of full scale for 0.01 Hz to 200 kHz.

Time Symmetry

Models 180 and 180LF, as applicable: $\pm 1\%$ on all but X 1M range.

1.2.4 Vertical Precision

Amplitude Change With Frequency (Sine)

Models 180 and 180LF, as applicable: Less than ±0.1 dB on all ranges thru X 100K. Less than ±0.5 dB on X 1M range.

1.2.5 Waveform Purity

(Models 180 and 180LF, as applicable)

Sine Distortion

Less than 0.5% on X 100, X 1K, X 10K ranges (typically 0.2%).

Less than 1.0% on X 1, X 10, X 100K ranges (typically 0.5%).

All harmonics 30 dB down on X 1M range.

Square Wave Rise and Fall Time

Less than 75 nanoseconds.

Triangle Linearity

Greater than 99% to 200 kHz.

1.2.6 Environmental

Specifications apply at $25^{\circ}C$ $\pm 5^{\circ}C$. Instrument will operate from $0^{\circ}C$ to $+50^{\circ}C$.

1.2.7 Mechanical

Dimensions

11% in./28.6 cm wide; 4 in./10.2 cm high; 10% in./26.7 cm deep.

Weight

6.5 lb/2.9 kg net; 9.5 lb/4.3 kg shipping.

1.2.8 Power

105 to 125V or 200 to 250V, 50 Hz to 400 Hz. Less than 15 watts.

NOTE

All specifications apply when frequency dial is between 0.1 and 2.0, amplitude is at 10V p-p and output is from HI BNC into 50Ω load.

SECTION 2 INITIAL PREPARATION

Position

2.1 UNPACKING INSPECTION

After carefully unpacking the instrument, inspect the external parts for damage to knobs, dials, indicators, surface areas, etc. If there is damage, file a claim with the carrier who transported the instrument. Retain the shipping container and packing material for use in case reshipment is required.

2.2 PREPARATION FOR USE

Before connecting the instrument to line power, check that the rear panel 115/230V switch is set to the value nearest the line voltage and that the fuse is correct for the switch setting. Check that the plug on the power cord is the mate for the line receptacle.

2.3 ELECTRICAL ACCEPTANCE CHECK

This checkout procedure provides a general verification of generator operation. Should a malfunction be found, refer to the Warranty in the front of this manual.

An oscilloscope, 50Ω coax cable, and a 50Ω feedthru are needed for this procedure (figure 2-1). Preset the generator front panel controls as follows:

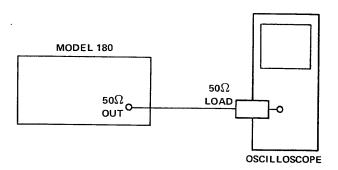


Figure 2-1. Acceptance Check Setup

FREQ MULT .						PWR OFF
Frequency Dial						1.0

Perform the steps in table 2-1; monitor the 50Ω OUT HI connector at the oscilloscope.

2.4 CHANGING THE OUTPUT IMPEDANCE

The output impedance is normally:

HI 50 Ω @ 10V p-p

LO 50Ω @ 1V p-p

Attenuation is normally 0 - 30 dB. Lowest possible amplitude is -50 dB.

If simultaneous 600Ω and 50Ω output impedances are desired:

- 1. Change value of R145 from 499 Ω to 604 Ω .
- 2. Remove R147.

The result is:

Control

-H 50Ω @ 10V p-p

LO 600Ω @ 10V p-p (low power)

Attenuation is 0 - 30 dB. Lowest possible amplitude is -30 dB. Square wave rise and fall is < 150 ns.

If 50Ω and any other impedance greater than 600Ω are desired replace R145 with resistor of that value.

If 50 dB of attenuation control is desired in a modified instrument, change R121 from 33.2Ω to 1.8Ω . Waveform quality above 20 kHz will be considerably impaired at -50 dB compared to a standard instrument.

Table 2-1. Acceptance Check

Step	Control	Position/Operation	Observe at 50Ω OUT
1	FREQ MULT	X 1 (Model 180) X .1 (Model 180LF)	1 Hz, 10V p-p sine wave (Model 180) 0.1 Hz, 10V p-p sine wave (Model 180LF)
2	FREQ MULT	X 1, X 10, X 100, X 1M (as applicable)	Frequency increases by a decade for every change of switch position
3	FREQ MULT	X 1K	
4	Function	√	Triangle wave
5	Function	T.	Square wave
6	AMPLITUDE	ccw	Decrease in waveform amplitude
7	DC OFFSET	cw	Positive slew of waveform from full negative offset
8	DC OFFSET	ccw	Negative slew of waveform
9	DC OFFSET	OFF	
10	AMPLITUDE	Full cw	
11	Dial	Full cw	
12	SWEEP WIDTH	Full cw	Frequency of waveform repetitively sweeps

SECTION OPERATION

3.1 CONTROLS AND CONNECTORS

The generator front panel controls and connections shown in figure 3-1 are keyed by circled numbers to the following descriptions.

3.1.1 Power/Frequency Controls

1) FREQ MULT/PWR OFF

Power is turned on when frequency range is selected at the FREQ MULT (Hz) control. The ranges multiplied by frequency dial (2) settings determine output frequency. The frequency dial index lights when power is turned on.

(2) Frequency Dial

Frequency dial settings multiplied by frequency range (1) determine output frequency.

(3) VCG IN Connector

Voltage controlled generator input (VCG IN) dc excursions proportionally control frequency within a selected range. Positive inputs increase frequencies set by the frequency dial and range control; negative inputs decrease the frequencies.

(4) GCV OUT Connector

Generator controlled voltage output (GCV OUT) dc excursions of 0V to about 2V proportionally represent output frequency within a given range.

3.1.2 Amplitude Controls

(5) DC OFFSET

Rotating the DC OFFSET control clockwise offsets dc center reference of waveform positive; when


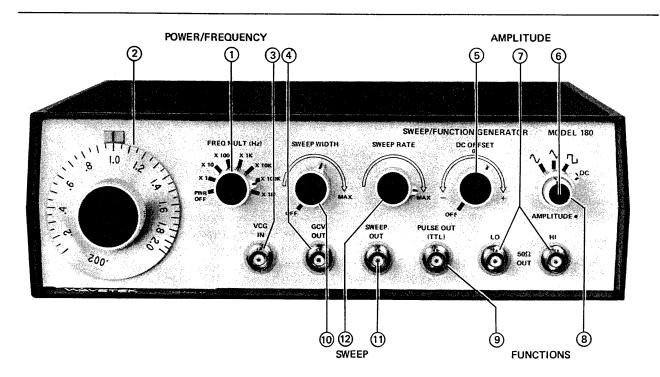


Figure 3-1. Model 180 Controls and Connectors

counterclockwise, negative. When OFF, the waveform is balanced around signal ground (figure 3-2).

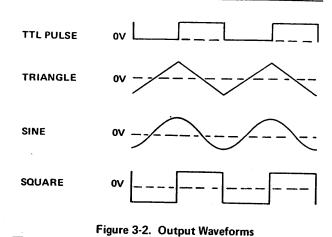

6 AMPLITUDE

Rotating the AMPLITUDE control fully clockwise provides maximum peak-to-peak output at the 50Ω OUT connectors; counterclockwise for up to 30 dB attenuation of output amplitude.

(7) 50Ω OUT Connectors

Maximum output of 10V p-p signals into a 50Ω load (20V p-p open circuit) is provided at the 50Ω OUT HI connector, and 20 dB below (1/10 or a 1V p-p maximum) of that level at the 50Ω OUT LO connector.

3.1.3 Function Selections

Sine $\,^{\searrow}$, triangle $\,^{\searrow}$, and square $\,^{\square}$ waveforms are selected by the larger of the two concentric controls; the DC position provides a dc voltage output of the waveform center reference level at the 50 Ω OUT $\,^{\bigcirc}$ connectors.

(9) TTL PULSE OUT Connector

A fixed amplitude Transistor-Transistor Logic (TTL) square pulse train of the output frequency is provided at the PULSE OUT (TTL) connector. (TTL levels are 0V to 0.4V for a logic low and 2.4V to 5V for a logic high.) The output can drive up to 20 TTL loads. The pulse train can also be used as a synchronizing reference for the main output 7. Phase of the waveforms relative to the TTL pulse is shown in figure 3-2.

3.1.4 Sweep Controls

(10) SWEEP WIDTH/OFF

Main output (at 50Ω OUT HI or LO) frequency sweep is turned on when SWEEP WIDTH is rotated past OFF. Rotation of the control varies the peak amplitude of an internal ramp signal (seen at GCV OUT) whose voltage controls the frequency of the main generator (seen at 50Ω OUT). See figure 3-3.

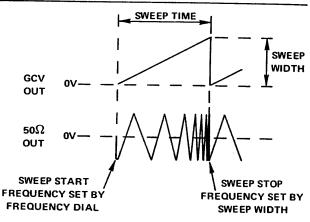


Figure 3-3. Effect of Sweep on Output Frequency

11 SWEEP OUT Connector

The sweep generator ramp is available at the SWEEP OUT connector. Amplitude is 0V to 5V peak (600Ω source impedance).

(12) SWEEP RATE

Rotation of SWEEP RATE controls duration of the sweep voltage ramp, and thus frequency of sweep repetition.

3.2 OPERATION

Operation can be quite varied but is described here as manual, voltage controlled or sweep controlled. The generator is ready to operate as soon as a frequency multiplier is selected; however, when output is critical, allow ½ hour warm up.

3.2.1 Signal Termination

Proper signal termination, or loading, of the generator connectors is necessary for its specified operation. For example, the proper termination of the main output is shown in figure 3-4. Placing the 50 ohm terminator, or 50 ohm resistance, in parallel with a higher impedance, matches the receiving instrument input impedance to the generator

output impedance, thereby minimizing signal reflection or power loss on the line due to impedance mismatch.

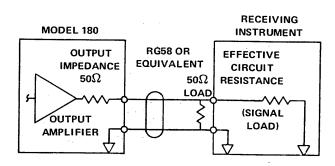


Figure 3-4. Signal Termination

The input and output impedances of the generator connectors are listed below:


Connector	Impedance
50 Ω OUT HI	50Ω
50Ω OUT LO	Ω 07
PULSE OUT (TTL)	*
SWEEP OUT	Ω 000
VCG IN	$2\mathrm{k}\Omega$
GCV OUT	600Ω

^{*}The PULSE OUT connector can drive up to 20 Transistor-Transistor Logic (TTL) loads (low level between 0V and 0.4V, and high level between 2.4V and 5V).

3.2.2 Manually Controlled Operation

For basic operation, select the waveform to be output, and set the output signal frequency and amplitude. The following steps demonstrate manual control of the function generator:

Step	Control/Connector	Setting								
1	50Ω ΟUΤ	Connect circuit to either HI or LO output (Ref: paragraph 3.2.1).								
2	FREQ MULT	Set to desired range of frequency.								
3	Frequency Dial	Set to desired frequency.								
4	Waveform Selector	Set to desired waveform.								
5	DC OFFSET	See figure 3-5.								
6	AMPLITUDE	Select desired amplitude.								

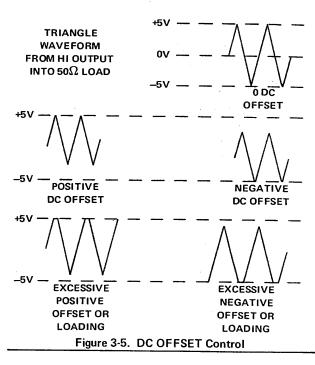

3.2.3 Voltage Controlled Operation

Operation as a voltage controlled function generator (VCG) is as for a manually controlled function generator, only the frequency within particular ranges is additionally controlled with dc levels (±2V excursions) injected at the VCG IN connector. Perform the steps given in paragraph 3.2.2, only set the frequency dial to determine a reference from which the frequency is to be voltage controlled:

- For frequency control with positive dc inputs at VCG IN, set the dial for a lower frequency limit.
- For frequency control with negative dc inputs at VCG IN, set the dial for an upper frequency limit.
- For modulation with an ac input at VCG IN, center the dial at the desired center frequency. Do not exceed the maximum dynamic range of the selected frequency range.

Figure 3-6 is a nomograph with examples of the frequency dial effect as a reference for VCG IN voltages. Example 1 shows that with 0V VCG input, frequency is as determined by the main dial setting, 1.0 in this example. Example 2 shows that with a positive VCG input, output frequency is increased. Example 3 shows that with a negative VCG input, output frequency is decreased. (Note that the 50Ω OUT Frequency Factor column value must be multiplied by a frequency range multiplier to give the actual 50Ω OUT frequency.)

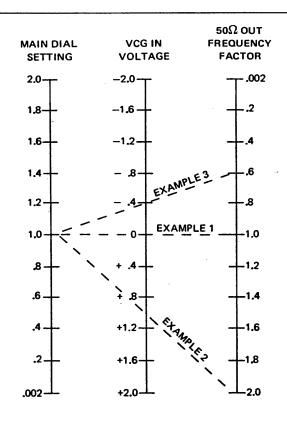


Figure 3-6. VCG Voltage-to-Frequency Nomograph

NOTE

Nonlinear operation results when the VCG input voltage is excessive; that is, when the attempted generator frequency exceeds the range setting (2 times the multiplier setting) or in the other direction, 1/1000th of the range setting.

The up to 1000:1 VCG sweep of the generator frequencies available in each range results from a 2V excursion at the VCG IN connector. With the frequency dial set to 2.0, excursions between -2V and 0V at VCG IN provide the up to 1000:1 frequency sweep. With the dial set to .002, excursions between 0V and +2V at VCG IN provide the up to 1000:1 sweep within the set frequency range.


3.2.4 Sweep Generator Operation

Operation as a sweep generator is like operation as a manual function generator, only the frequency is automatically and repetitively swept from the set frequency to a higher frequency. Actually, an internally generated positive-going voltage ramp (available at the SWEEP OUT connector) can be modified in amplitude and used like a VCG input voltage to sweep the output frequency (see figure 3-3). Perform the steps in paragraph 3.2.1 and the following steps for use as a sweep generator:

Step	Control/Connector	Setting
1	SWEEP WIDTH	As desired. This determines the upper frequency of the sweep.
2	SWEEP RATE	As desired. This determines the speed of the sweep.

NOTE

To monitor the ramp generator, use the SWEEP OUT connector. To monitor the frequency of the main generator, use the GCV OUT connector, which is a voltage proportional to the generator frequency.

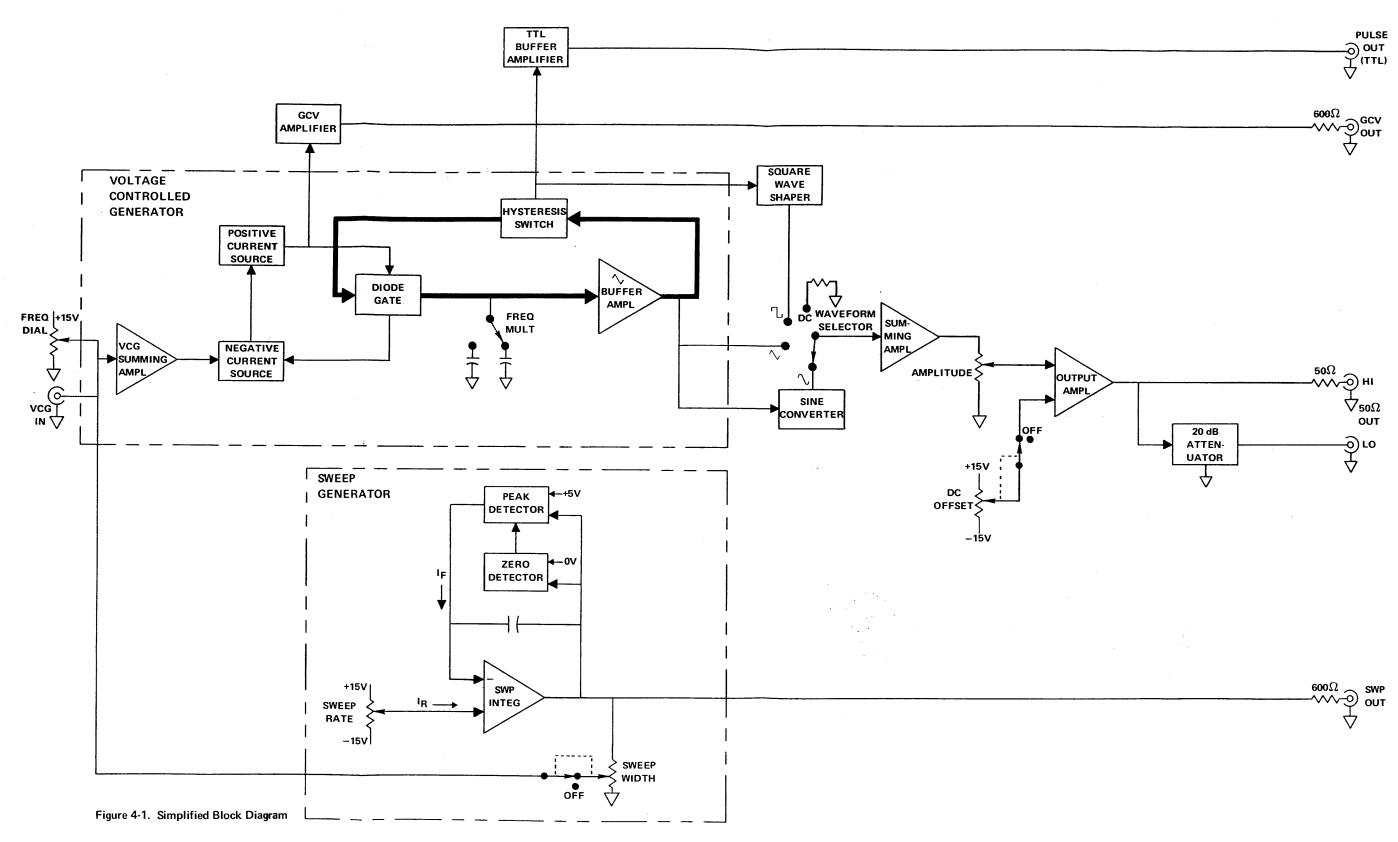

SECTION 4 CIRCUIT DESCRIPTION

4.1 VOLTAGE CONTROLLED GENERATOR (VCG)

As shown in figure 4-1, the VCG summing amplifier sums the currents from the frequency dial, sweep generator, crystal control and VCG input connector. The VCG summing amplifier is an inverting amplifier whose output current is used to control a positive current source and a negative current source. The currents from the two current sources are equal and opposite polarity and the magnitudes are directly proportional to the current of the VCG summing amplifier output. The diode gate, which is controlled by the hysteresis switch, is used to switch the positive current or the negative current to the integrating capacitor selected by the frequency multiplier. If the positive current is switched into the capacitor, the voltage across the capacitor will increase linearly to generate the positive slope of the triangle wave. If the current is negative, the voltage across the capacitor will decrease linearly to produce the negative slope.

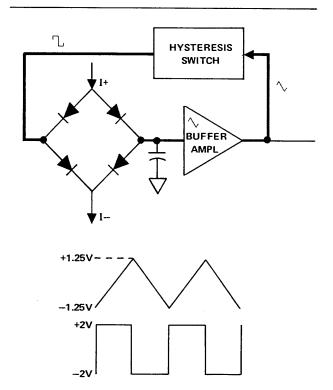


Figure 4-2. Simplified Timing Diagram

The triangle buffer amplifier is a unity gain amplifier whose output is fed to the hysteresis switch as well as to the sine converter. The hysteresis switch has two voltage limit points (+1.25V) and -1.25V. (See figure 4-2.)

During the time the output voltage of the triangle buffer amplifier is increasing, the output voltage of the hysteresis switch is positive, but when the output voltage of the triangle amplifier reaches +1.25V, it triggers the hysteresis switch causing the switch output to become negative. Once the control voltage into the diode gate becomes negative, it will switch the positive current out and switch the negative current in to the integrating capacitor, starting a linear decrease of the voltage across the capacitor. When the decreasing voltage reaches -1.25V, the output of the hysteresis switch will switch back to positive, reversing the process. This action generates the triangle waveform as shown in figure 4-2. Since the output of the hysteresis switch is a square wave, the result is simultaneous generation of a square wave and triangle wave at the same frequency.

4.2 FREQUENCY CONTROL

The output frequency is determined by the magnitude of the integrating capacitor selected by the frequency multiplier and the magnitude of the positive and negative current sources (figure 4-1). Since the current magnitudes are linearly proportional to the sum of the VCG current, the output frequency will also be linearly proportional to the current sum.

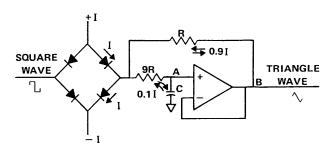


Figure 4-3. Current Divider

By using current division, the magnitude of the capacitor is effectively increased, allowing the generation of lower frequencies. Figure 4-3 is the simplified diagram showing current divider operation. By reducing integration current precisely by a factor of 10 while holding triangle wave amplitude constant, it is possible to extend the lower frequency range by a factor of 10 with fixed capacitance C. Since points A and B are at the equipotential points, constant current output I can be divided by resistance ratio of R and 9R. Then, integration current of capacitor C is reduced to 0.1 I. The lower current extends the frequency range of the function generator by a factor of 10. The same theory is applied to extend the frequency range by a factor of 100.

4.3 WAVEFORM OUTPUT

The inverted output of the hysteresis switch is fed to the TTL buffer amplifier and also the square wave shaper (figure 4-1). The square wave shaper consists of a shaping circuit which limits the output swing to ± 1.25 volts.

The output signal from the triangle buffer amplifier is applied to the sine converter, which uses a diode-resistor network with linear sections to shape a sine wave.

The sine, triangle or square waveform is fed to the summing amplifier through the waveform selector switch. The output of summing amplifier is fed through the amplitude control to the output amplifier. The output amplifier is an inverting amplifier whose output is capable of driving 10V p-p into 50Ω load from 50Ω source impedance.

4.4 SWEEP CIRCUITS

Sweep rate control determines the amount of integrating current fed to the positive input of the sweep integrator (figure 4-1). The output voltage increases linearly as the sweep circuit capacitor is charged to form the positive slope of the ramp. As the ramp output reaches the preset level of +5V, the peak detector turns on while the positive feedback circuit holds the positive output state. The large flyback current IF is fed to the negative input of the sweep integrator while overcoming minute integrating current IR. Thus, the ramp output decreases rapidly toward the negative voltage, forming the negative slope of the ramp. When the negative slope reaches zero volts, the zero detector turns on, the peak detector is unlatched and the flyback current source is turned off, allowing the output voltage to increase linearly.

SECTION **5** CALIBRATION

5.1 FACTORY REPAIR

Wavetek maintains a factory repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for calibration or repair, a detailed description of the specific problem should be attached to minimize turnaround time.

5.2 REQUIRED TEST EQUIPMENT

Voltmeter Distortion Analyzer Oscilloscope 50Ω ($\pm 0.1\%$) Load Counter (6 digit)

5.3 REMOVING GENERATOR COVER

Remove the four screws in the lower cover, place the instrument on its feet and lift off the top cover.

5.4 CALIBRATION

After referring to the following preliminary data, perform calibration, as necessary, per table 5-1. If performing partial

calibration, check previous settings and adjustments for applicability.

- 1. Unless otherwise noted, all measurements made at the 50Ω OUT connector should be terminated into a 50Ω (\leq 1%, 1W) load.
- Before connecting the unit to an ac source, check the ac line circuit to make sure the 115/230 volt switch is set at the correct position (see paragraph 2.2).
- Start the calibration by setting the front panel switches as follows:

Dial							. 2.0
FREQ MULT .							X 1K
SWEEP WIDTH							OFF
SWEEP RATE							ccw
DC OFFSET .							OFF
Function							\sim
AMPLITUDE .							. cw

4. Allow the unit to warm up at least 30 minutes for final calibration.

Table 5-1. Calibration Chart

Check	Tester	Cal Points	Control Setting	Adjust	Desired Results	Remarks
Power supply regulation	Voltmeter	TP2 (TP1 ground)		R9	+15 ±0.01V	
		TP3			-15 ±0.05V	
Distortion	1	1		R78 R103	Minimum distortion	
	Power supply regulation	Power supply regulation Distortion Distortion analyzer	$\begin{array}{c cccc} \textbf{Check} & \textbf{Tester} & \textbf{Points} \\ \hline Power & Voltmeter & TP2 (TP1 \\ supply \\ regulation & & & & & \\ \hline TP3 & & & & \\ \hline Distortion & Distortion analyzer & 50\Omega \\ \hline \end{array}$	$\begin{array}{c cccc} \textbf{Check} & \textbf{Tester} & \textbf{Points} & \textbf{Setting} \\ \hline Power & Voltmeter & TP2 (TP1 \\ supply & regulation & & & \\ \hline & & & & \\ \hline Distortion & Distortion analyzer & 50\Omega & & \\ \hline \end{array}$	Check Tester Points Setting Adjust Power supply regulation Voltmeter TP2 (TP1 ground) R9 TP3 TP3 R78	CheckTesterPointsSettingAdjustResultsPower supply regulationVoltmeterTP2 (TP1 ground)R9 $+15 \pm 0.01 \text{V}$ TP3 $-15 \pm 0.05 \text{V}$ DistortionDistortion analyzer 50Ω R78 Minimum

Table 5-1. Calibration Chart (Continued)

Step	Check	Tester	Cal Points	Control Setting	Adjust	Desired Results	Remarks
4	VCG null	Scope (50Ω terminated)		FREQ MULT X 100K Function \(\bigcup_{\text{c}} \) Dial full cw Scope vert 2V/div Scope horiz .5 ms/div	R43	Minimum fre- quency shift	Adjust generator dial for 1 full square on scope. Alternately short and open VCG IN BNC while adjusting R43.
5	Horizontal symmetry			Scope X 10 on	R47	Maximum sym- metry	Alternately switch scope triggering from positive to negative slope while adjusting R47.
6				Dial 0.1 FREQ MULT X 10 Scope sweep 0.1s/div DC triggering	R66	Maximum sym- metry	For 180LF, FREQ MULT X 1. Scope sweep 1s/div.
7	Frequency accuracy	Counter (50Ω terminated)	·	Dial 2.0 FREQ MULT X 1 thru X 10K	R39	Best frequency accuracy over X 1 thru X 10K	
8				FREQ MULT X 1M Function ~ ~ 几	C19	Best frequency accuracy for all waveforms	
9	DC level	Voltmeter (50Ω terminated)	·	FREQ MULT X 1K- Function DC Amplitude ccw	R125	0 ±20 mVdc	

SECTION **6** TROUBLESHOOTING

6.1 FACTORY REPAIR

Wavetek maintains a factory repair department for those customers not possessing the necessary personnel or test equipment to maintain the instrument. If an instrument is returned to the factory for calibration or repair, a detailed description of the specific problem should be attached to minimize turnaround time.

6.2 TROUBLESHOOTING CHART

Troubleshooting charts are given in figure 6-1. The charts do not cover every possible trouble, but will be an aid in systematically isolating faulty components.

6.3 TROUBLESHOOTING INDIVIDUAL COMPONENTS

6.3.1 Transistor

- A transistor is defective if more than one volt is measured across its base emitter junction in the forward direction.
- A transistor when used as a switch may have a few volts reverse bias voltage.
- If the collector and emitter voltages are the same, but the base emitter voltage is less than 500 mV forward voltage (or reversed bias), the transistor is defective.
- A transistor is defective if its base current is larger than 10% of its emitter current (calculate currents from voltage across the base and emitter series resistors).

5. In a transistor differential pair (common emitter stages), either their base voltages are the same in normal operating condition, or the one with less forward voltage across its base emitter junction should be off (no collector current); otherwise, one of the transistors is defective.

6.3.2 Diode

1. A diode is defective if there is greater than one volt (typically 0.7 volt) forward voltage across it.

6.3.3 Operational Amplifier (e.g., UA741C, LM318)

- The "+" and "-" inputs of an operational amplifier will have less than 15 mV voltage difference when operating under normal conditions.
- If the output voltage stays at maximum positive, its
 "+" input voltage should be more positive than its
 "-" input voltage, or vice versa; otherwise, the
 operational amplifier is defective.

6.3.4 Capacitor

- Shorted capacitors have zero volts across their terminals.
- Opened capacitor can be located (but not always) by using a good capacitor connected in parallel with the capacitor under test and observing the resulting effect.

SYSTEM CHECK

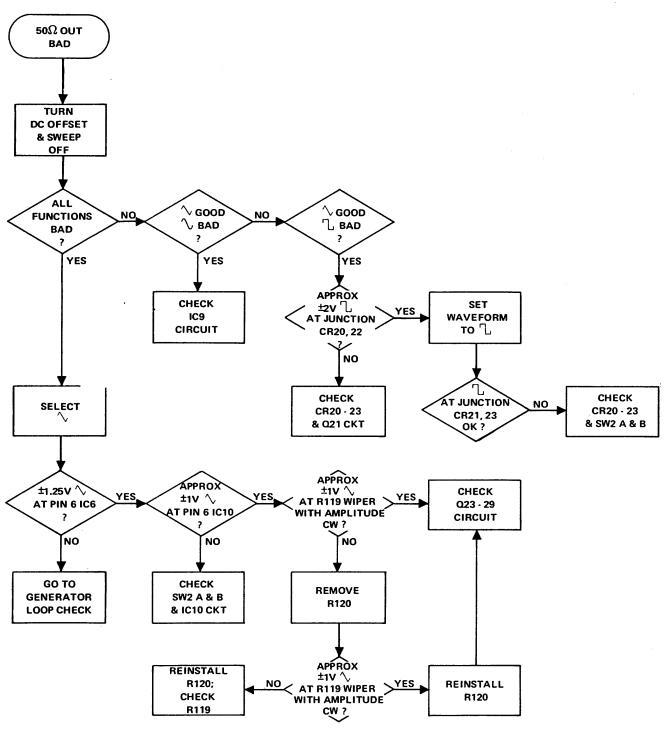


Figure 6-1. Troubleshooting Chart (Sheet 1 of 4)

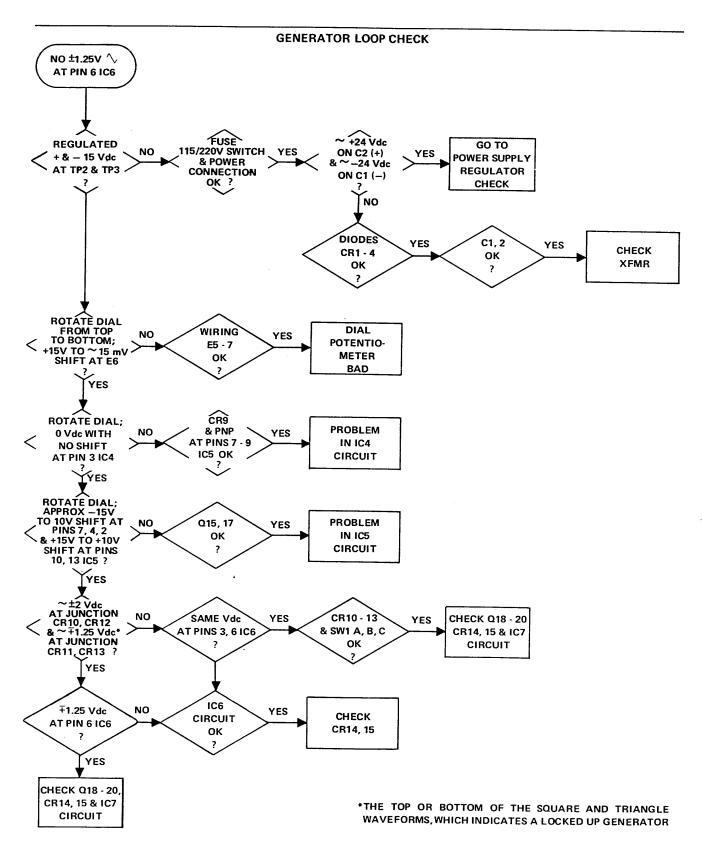


Figure 6-1. Troubleshooting Chart (Sheet 2 of 4)


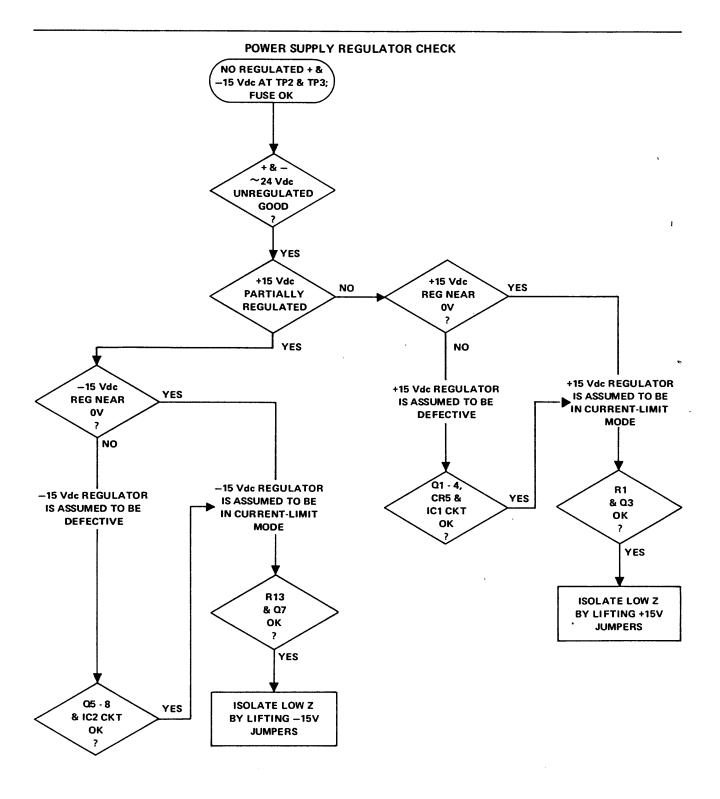


Figure 6-1. Troubleshooting Chart (Sheet 3 of 4)

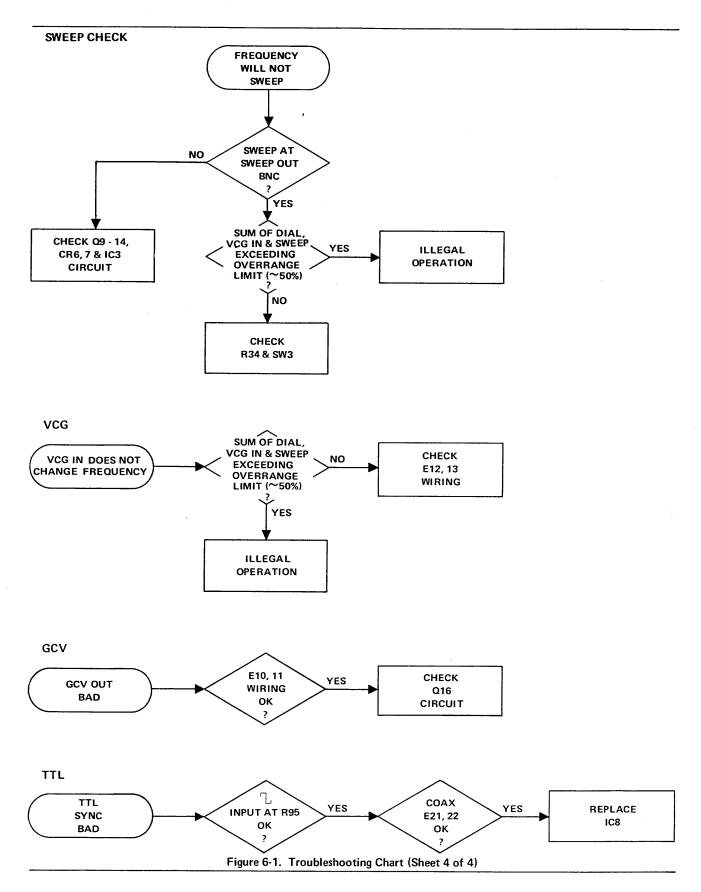

SECTION PARTS AND SCHEMATICS

7.1 DRAWINGS

The following assembly drawings (with parts lists) and schematics are in the arrangement shown below.


7.2 ORDERING PARTS


When ordering spare parts, please specify part number, circuit reference, board, serial number of unit, and if applicable, the function performed.

7.3 ADDENDA

Under Wavetek's product improvement program, the latest electronic designs and circuits are incorporated into each Wavetek instrument as quickly as development and testing permit. Because of the time needed to compose and print instruction manuals, it is not always possible to include the most recent changes in the initial printing. Whenever this occurs, addendum pages are prepared to summarize the changes made and are inserted immediately inside the rear cover. If no such pages exist, the manual is correct as printed.

	Page No.
CHASSIS	
Schematic	7-2
Assembly Drawing	7-3
Model 180 Parts List	7-4
Model 180LF Parts List	7-5
MAIN BOARD	
Schematic	7-6
Assembly Drawing	7-7
Model 180 Parts List	7-8
Model 180LF Parts List	7-10

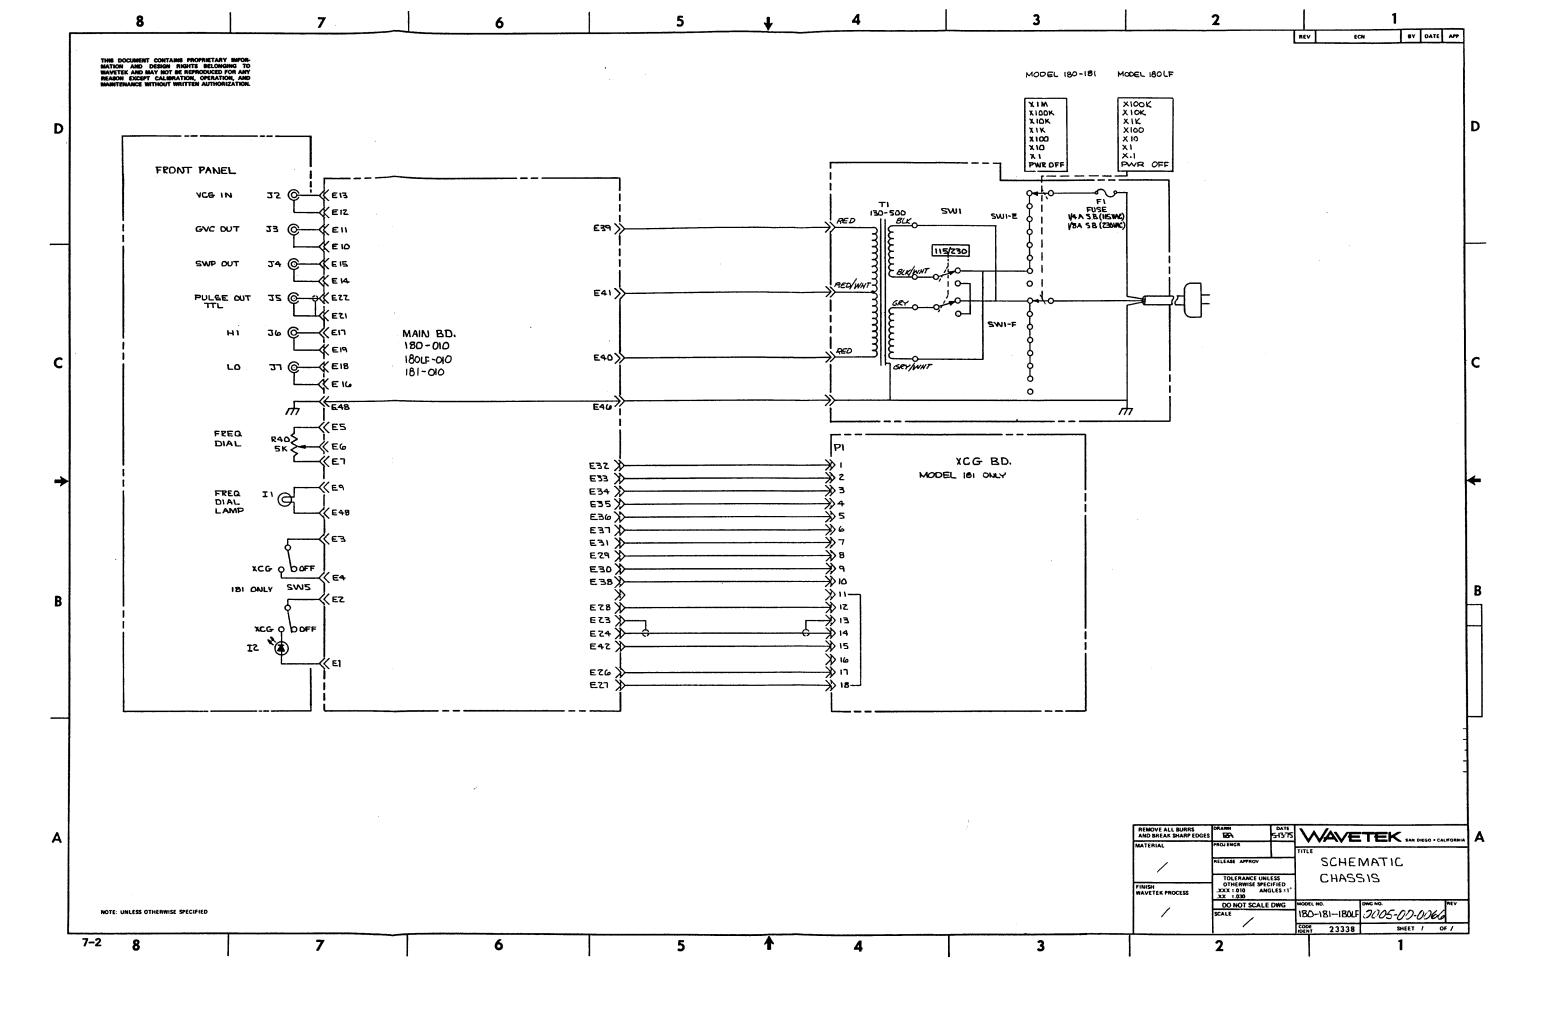

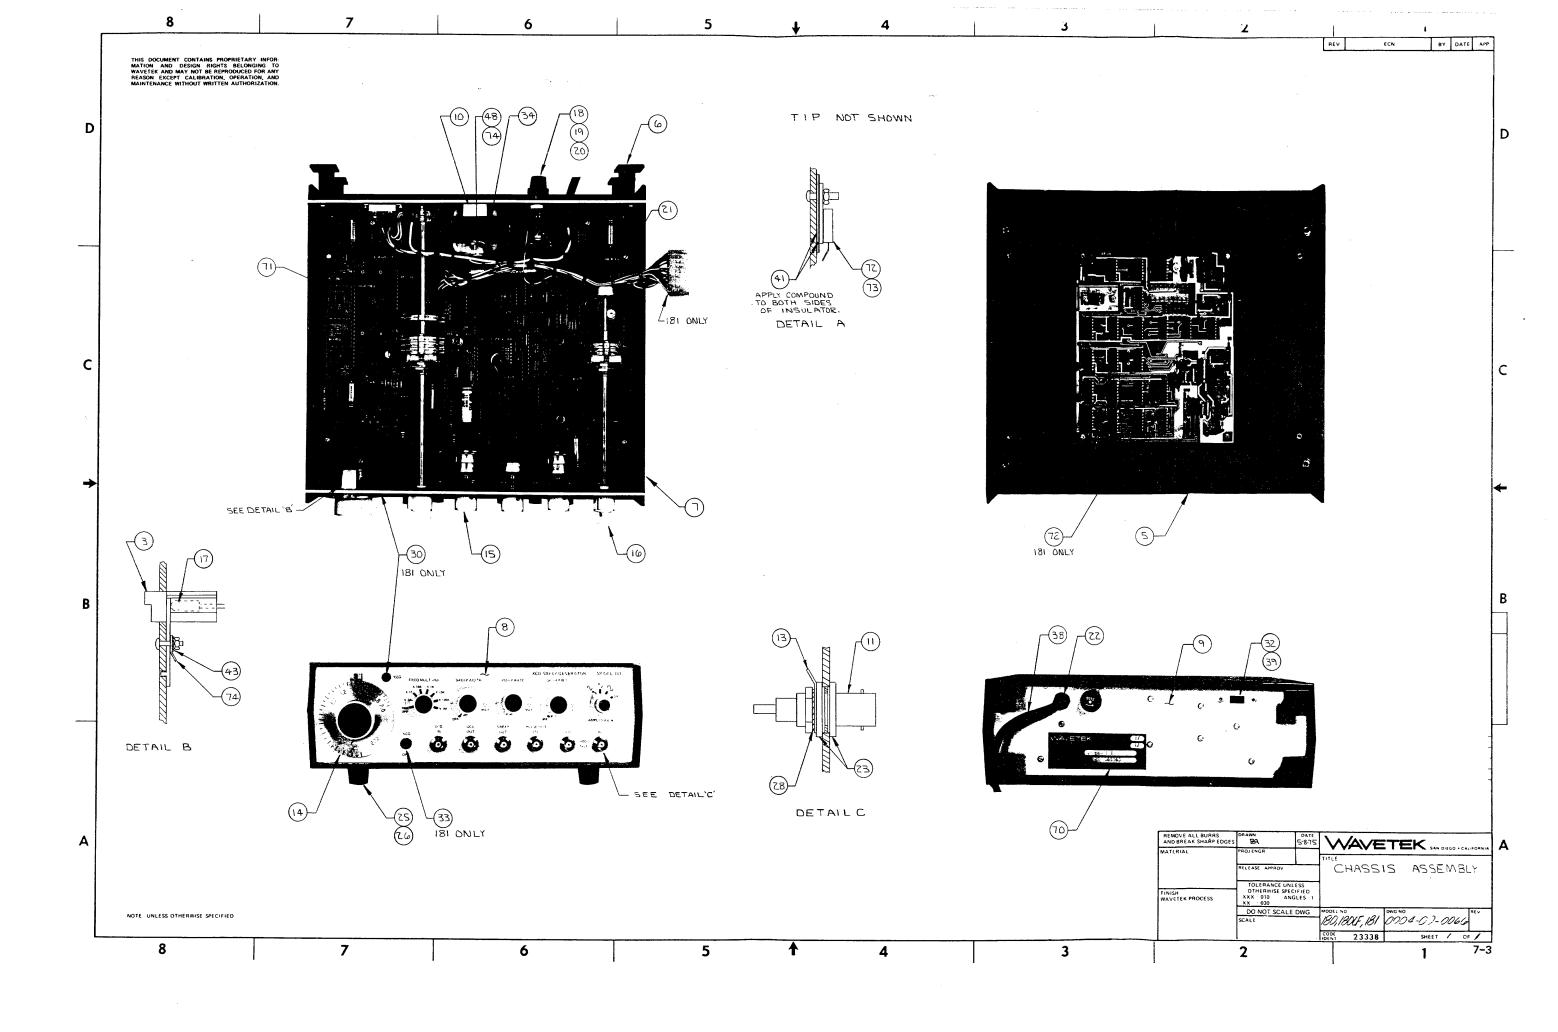

WAVETEK PART/STOCK NO. STATION NO. REF DESIG DESCRIPTION MFGR PART NO. MFGR WVTK WVTK WVTK 0005-00-0066 1400-00-0653 1400-00-4970 SCHEMATIC CHASSIS 180-200 SPACER 8480 DIAL INDICATED 8480 180-303 WVTK
WVTK
WVTK
WVTK
WVTK
WVTK
WVTK
KING 0004-00-0066 1400-00-5000 1400-00-5020 CHASSIS ASSEMBLY 180-000 CHASSIS TOP 180-300-1 180-302 CHASSIS BOTTOM 180-300-2 1400-00-5030 FRONT PANEL 180-305-1 1400-00-5050 REAR PANEL TRANSFORMER BLOCKS 1400-00-5053 1400-00-5073 1400-00-5083 180-306 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 180-309 KC7946 2100-01-0002 2100-04-0012 1400-00-5358 2400-01-0008 SOLDER LUG 1497 SMITH DIAL ASSY WVTK ROGAN RB67-1-SB-M KNOB KNOB SET RB67-1-SB+0-M-9 ROGAN 2400-01-0009 L28-40 MURA 2400-02-0013 FUSE 230V FUSE 115V FUSE HOLDER 313-125 313-250 345001 TYB-23M-6 2400-05-0001 2400-05-0008 LFUSE LFUSE LFUSE 2400-05-0012 CABLE TIES T+BENGN 2800-00-0006 2800-00-0015 2800-01-0002 HEY CO TMPSN STRAIN RELIEF SR5P-4 4L2FF TMPSN 2800-01-0002 1443-M03-F05-4-40 UNICORD 2800-02-0009 NYLINERS STANDOFFS (MALE-FEMALE) WVTK TINN BAIL KIT 180-500 2800-08-0010 1 6 2 12 FASTENER (FEET) C7494-632-4 2800-09-0003 CHASSIS BLOCKS SHOULDER WASHER USECO SMITH 2800-09-0022 2800-27-0004 1591C-11 2668 UID SWITCH 115/230 (SOLDER SHIELD) SW422/SG 5105-00-0001 WVTK
ECC
ECC
ECC
BELDEN
DAYTON
WVTK TRANSFORMER 130-500 5600-00-0005 FIT-221-1/8 FIT-221-3/16 6001-20-3000 6001-20-3000 SHRINK TUBING AR AR SHRINK TUBING FP-301-1/2 17237 SHRINK TUBING 6001-20-8000 POWER CORD 6001-80-0001 POP RIVETS POWER WAFER 4 X 641 130-SW1-3 5104-02-0007 TITLE CHASSIS ASSEMBLY NO. 1704-00-0066 WAVETEK® 180-000 APPROVAL MODEL 180 PARTS LIST


Form 102


EM IO.	REF DESIG	DESCRIPTION	MFGR PART NO.	MFGR	WAVETEK PART/STOCK NO.	ату	STATION NO.	PRE NO
40		THERMAL COMPOUND	120-2	WKFLD		AR		T
41		NUT #4	ţ	1		7		1
42		LOCK WASHER #4	1	1	}	7		
43		4 X 40 X 1/4	į	ļ		4		-
44		4 X 40 X 1/4		1	\	6		- {
45		4 X 40 X 3/8		1	1	3		l
46		4 x 40 x 7/8		1		2		
47		4 X 40 X 1-1/2		1		2		- 1
48		4 X 40 X 1/4 FILISTER HD.	l	1	1	4		
49		LOCK WASHER #6	İ	1		10		1
59		LOCK WASHER #8	ĺ	1	1	4		}
51		6 X 32 X 3/4	l	1	1	6		- 1
52		6 X 32 X 5/8 SELF TAPING		i	}	4		- 1
53		8 X 32 X 2-1/4 BLK OXIDE		1	l	4		l
54		WIRE BLACK		ļ	6000-32-2001	1 1		- 1
55		GREEN		1	6000-32-2005	1 1		1
56	•	BLUE	1	1	6000-32-2006	1 1		-
57		VIOLET	1	ļ	6000-32-2007	1 1		- 1
58		WHITE	i	1	6000-32-2009	1 1		1
59		BLACK/WHITE		-	6000-32-2090	1 1		
50		RED/WHITE	i	1	6000-32-2092	1 1		- 1
51		ORANGE/WHITE	Ì	1	6000-32-2093	1 1		1
52		YELLOW/WHITE	}	1	6000-32-2094	1 1		- 1
53		GREEN/WHITE	1	1	6000-32-2095			- 1
54		BLUE/WHITE	1	Į.	6000-32-2096			- 1
,		VIOLET/WHITE	1	l l	6000-32-2097	1 1		
56		GREY/WHITE	Ì	l	6000-32-2098	1 1		- [
7		COAX	RG/741V	į	6001-40-0001			
8				ì		1 1		1
		POWER CORD HOLDER		WVTK	1400-00-5400	1 1		- 1
0		SERIAL TAG	180-318	WVTK	1400-00-5390			-
72		MAIN BD. ASSY	180-010	WVTK	1700-00-0178	1		- 1
3		WAVETEK LOGO	139-305	WVTK	1400-00-2180	1		
4		SOLDER LUG		l		2		
7		SOLDER LUG	1414-4	SMITH	2100-04-0008	! 4]		- 1
- 1			1	l		- 1		1
						1 1		1
	···	TITLE CHASSIS ASSEMBLY		DRAWN BY	<u> </u>	10 1704	22 22(IR
W	AVETEK	CHASSIS ASSEMBLE		1		Ю. 1704-		1"
	ARTS LIST			APPROVAL		180-0	2 2	1
	WKID FIDI	MODEL 180		1	1		SH OF	

ITEM NO.	REF DESIG	DESCRIPTION	MFGR PART NO.	MFGR	WAVETEK PART/STOCK N	о. От	STATION NO.	PREP NO.
1		SCHEMATIC CHASSIS	180-200	WVTK	0005-00-0066			
2		SPACER 8480	8480	WVTK	1400-00-0653		2	1 1
3		DIAL INDICATED	180-303	WVTK	1400-00-4970		ī	- 1 1
4		CHASSIS ASSEMBLY	180-000	WVTK	0004 -00-0066		-	
5		CHASSIS TOP	180-300-1	WVTK	1400-00-5000	1 :	1	- 1 1
6		POST	180-302	WVTK	1400-00-5020		4	
7		CHASSIS BOTTOM	180-300-2	WVTK	1400-00-5030		i l	
8	180LF	FRONT PANEL	180-305-2	WVTK	1400-00-5060		ī	
9		REAR PANEL	180-306	WVTK	1400-00-5073		1	
10		TRANSFORMER BLOCKS	180-309	WVTK	1400-00-5083	1:	2 .	- 1 - 1
11	J2-J7	BNC's	KC7946	KING	2100-01-0002	- 1 (6	- 1 1
12						1		1 1
13		SOLDER LUG	1497	SMITH	2100-04-0012	- 1 (6	1 1
14		DIAL ASSY		WVTK .	1400-00-5358	- 1 :	i	
15		KNOB	RB67-1-SB-M	ROGAN	2400-01-0008	4	4	1 1
16		KNOB SET	RB67-1-SB+0-M-9	ROGAN	2400-01-0009	- 1 :	1	
17		LAMP	L28-40	MURA	2400-02-0013	1 1	ı İ	
18		FUSE 230V	313-125	LFUSE	2400-05-0001	:	1	1 1
19		FUSE 115V	313-250	LFUSE	2400-05-0008	. ! :	1	- 1 - 1
20		FUSE HOLDER	345001	LFUSE	2400-05-0012	1 :	1	- 1 - 1
21		CABLE TIES	TYB-23M-6	T+BENGN	2800-00-0006	1:	7	
22		STRAIN RELIEF	SR5P-4	HEYCO	2800-00-0015	1 1	ı	
23		NYLINERS	4L2FF	TMPSN	2800-01-0002	- [:	5	1 1
24		STANDOFFS (MALE-FEMALE)	1443-M03-F05-4-40	UNICORD	2800-02-0009	4	4	1 1
25	1	BAIL KIT	180-500	WVTK	2800-08-0010	1	1	- 1 1
26		FASTENER (FEET)	C7494-632-4	TINN	2800-09-0003	- 1 6	5	1 1
27		CHASSIS BLOCKS	1591C-11	USECO	2800-09-0022	1 2	2	
28		SHOULDER WASHER	2668	SMITH	2800-27-0004	13	2	1 1
29				ł		- 1		
30				i .		- 1	1	1 1
31	,	SWITCH 115/230 (SOLDER SHIELD)	SW422/SG	UID	5105-00-0001	1	l	1 1
32			1	1		ı		- 1 - 1
33	-	TRANSFORMER	130-500		5600-00-0005		l	
34		SHRINK TUBING	FIT-221-1/8	ECC	6001-20-2000	/	AR .	
35		SHRINK TUBING	FIT-221-3/16		6001-20-3000		AR	
36		SHRINK TUBING	FP-301-1/2		6001-20-8000	A	AR .	
37	1	POWER CORD	17237		6001-80-0001		l	1 1
38		POP RIVETS	4 X 641	DAYTON		2	2	
一	VAVETEK	TITLE CHASSIS ASSEMBLY		DRAWN BY		NO. 17	704-00-0067	REV
				APPROVAL		18	30LF-000	1 1
	PARTS LIST	MODEL 180LF					sH_1_ oF_2	$oldsymbol{\perp}$

ITEM NO.	REF DESIG	DESCRIPTION	MFGR PART NO.	MFGR	WAVETEK PART/STOCK N	о. От	STATION NO.	PREP NO.
39		POWER WAFER	130-SW1-3	WVTK	5401-02-0007		2	
40		THERMAL COMPOUND	120-2	WKFLD			AR	
41		NUT #4		1		:	7	- 1
42		LOCK WASHER #4		1		1	7	1
43		4 X 40 X 1/4		1	l		4	- 1
44		4 x 40 x 1/4		1			6	
45		4 X 40 X 3/8	1	1	l		3	
46		4 X 40 X 7/8		į.			2	
47		4 x 40 x 1-1/2		l			2	
48		4 X 40 X 1/4 FILISTER HD.		1			4	
49		LOCK WASHER #6		1	1	10		
50		LOCK WASHER #8		1	Į.	- 1	4	
51 52	:	6 X 32 X 3/4 6 X 32 X 5/8 SELF TAPING					6 4	- 1
53		8 X 32 X 2-1/4 BLK OXIDE		1			<u>.</u>	ĺ
54		WIRE BLACK			6000-32-2001	- 1 '	*	l
55		WIRE GREEN			6000-32-2005	- 1		- 1
56		WIRE BLUE		ı	6000-32-2006	- 1		
57	•	WIRE VIOLET			6000-32-2007	ı		
58		WIRE WHITE	į.	ı	6000-32-2009			
59		WIRE BLACK/WHITE			6000-32-2090	- 1		- 1
60		WIRE RED/WHITE		j	6000-32-2092	- 1	ł	
61		WIRE ORANGE/WHITE		j	6000-32-2093	- 1		
62		WIRE YELLOW/WHITE		i	6000-32-2094	- 1		
63		WIRE GREEN/WHITE		į	6000-32-2095	- 1	ł	
64		WIRE BLUE/WHITE		I	6000-32-2096	- 1	1	
65		WIRE VIOLET/WHITE		1	6000-32-2097	ı		
66		WIRE GRAY/WHITE			6000-32-2098			
67		COAX	RG/741V		6001-40-0001			
68			'	1	1	- 1	1	
69		POWER CORD HOLDER		WVTK	1400-00-5400	- :	1	
70		SERIAL TAG	180-318	WVTK	1400-00-5390		1	
71		MAIN BD. ASSY	180LF-010	WVTK	1700-00-0179		լ	
72 73		WAVETEK LOGO	139-305	WVTK	1400-00-2180	- 1 -	^L	- 1
74		COLDED THE	1414 4		2100 0/ 0000	- 1	.	
! ′"		SOLDER LUG	1414-4	SMITH	2100-04-0008	:	2	
l マ	VAVETEK	TITLE CHASSIS ASSEMBLY		DRAWN BY	L		1704-00-0067	REV
				APPROVAL			180LF-000	ı
	PARTS LIST	MODEL 180LF		1			sH2 oF2	- l

orm 102

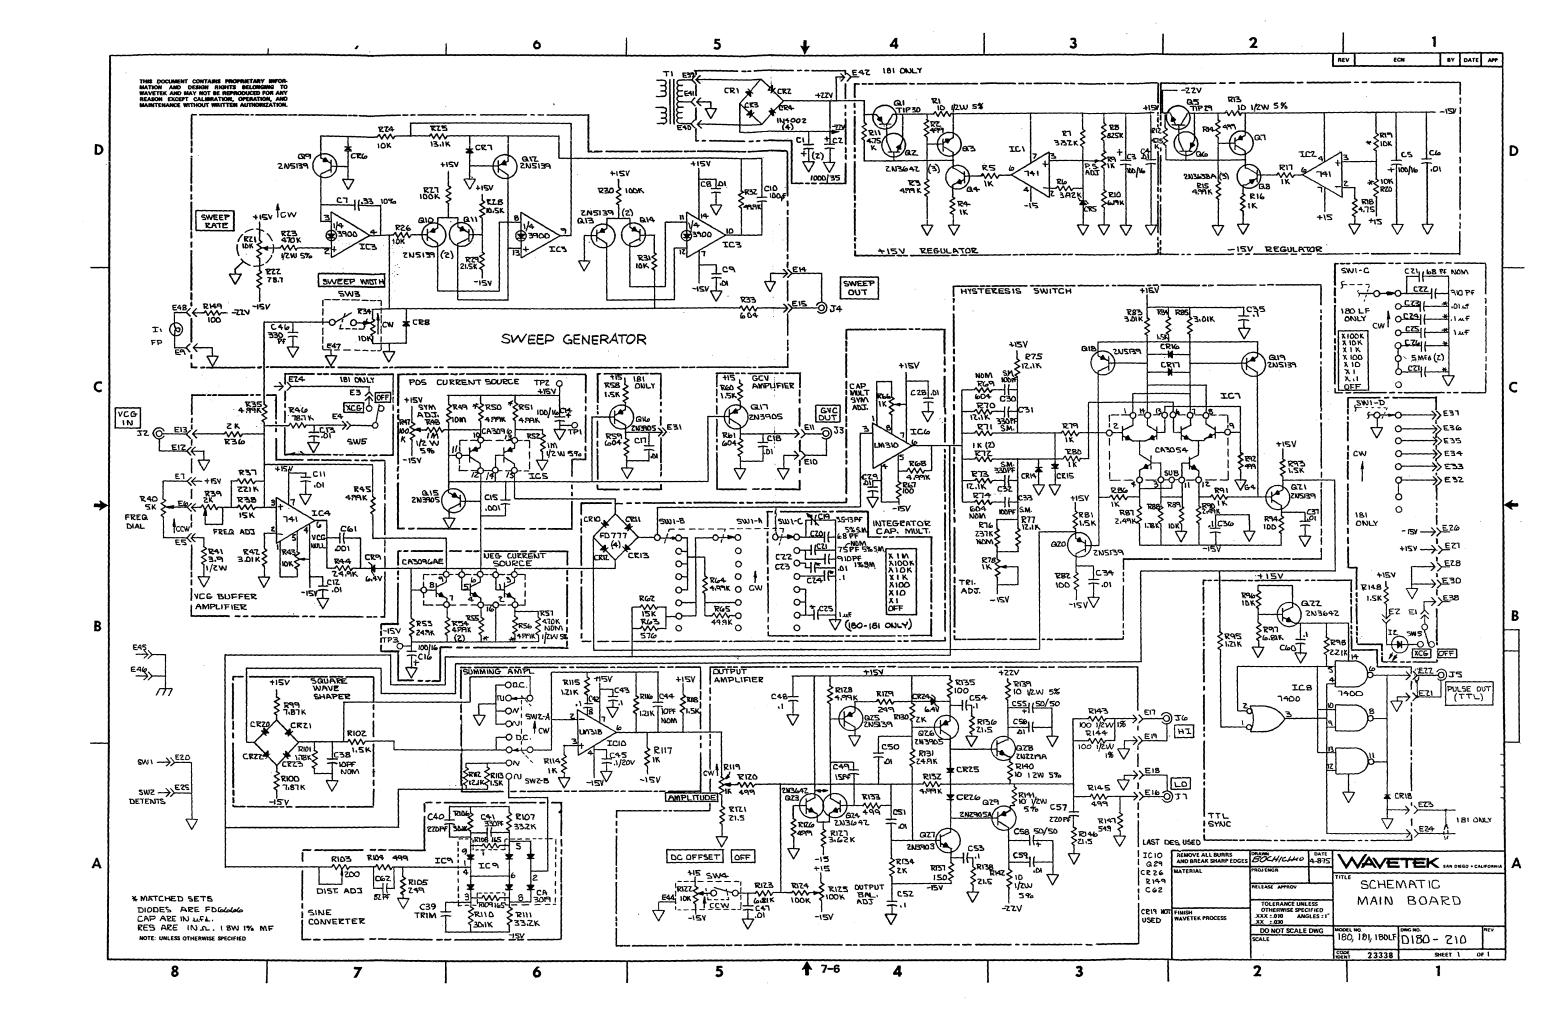

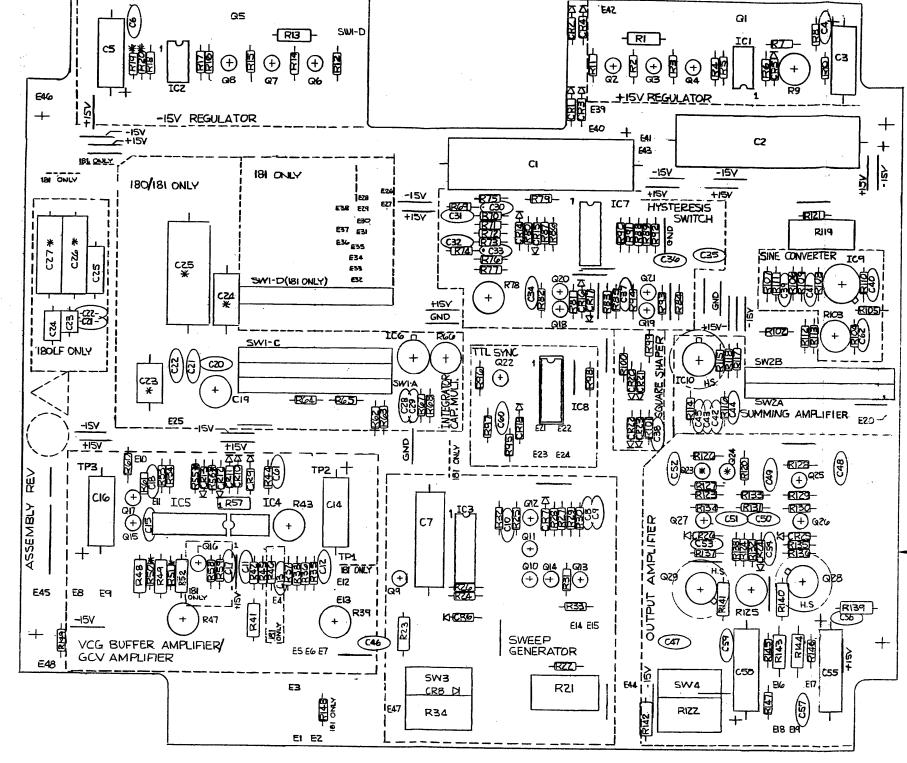

SWI

POSITION.

ADDED STOP-

DETENT SHOWN FROM FRONT VIEW IN FULL COUNTER CLOCKWISE

0 0 0

-FIXED STOP

SW 2

POSITION.

ADDED STOR

DETENT SHOWN FROM FRONT VIEW IN FULL

COUNTER CLOCKWISE

-NOTE: FOR SILKSCREEN MASTER DIGITIZE ALL BLACK NOMENCLA-TURE AND CUTLINES WITHIN BOARD OUTLINE

NO.	חבר חבטוט	0	ESCRIPTION	MFGR PART NO.	MFGR	WAVETEK PART/STOCK N	о. ОТУ	STATION NO.	PREP
1 2 3		SILKSCREEN ASS PRINTED CIRCUI SCHEMATIC		180-010 180-110 180-210	WVTK WVTK WVTK	0001-00-0178 1703-00-0178 0002-00-0178	1		
9 10 11 12 13 14 15	C38, C44 C49 C62 C10 C39, C57 C41, C46 C15, C61 C4, C6, C8 C9, C11, C12 C18, C28, C29 C34, C60, C37 C47, C50, C51 C56, C59 C35, C42, C43 C45, C48, C52 C53, C54, C36	CAPACITORS CERAMIC DISC CERAMIC DISC CERAMIC DISC CERAMIC DISC CERAMIC DISC CERAMIC DISC CERAMIC DISC CERAMIC DISC CERAMIC DISC CERAMIC DISC CERAMIC DISC CERAMIC DISC CERAMIC DISC	1000V, 10FF 1000V, 15FF 1000V, 82PF 1000V, 20PF 1000V, 20PF 1000V, 330PF 1000V, .001µf 50V, .01µf	DD150 DD820 DD101 DD221 DD331 DD102 CK103	CRI. CRL CRL CRL CRL CRL CRL CRL CRL CRL CRL		2 1 1 1 2 2 2 17	3-50, 5-5 5-9 2-50 4-38 2-43, 5-48 2-38, 4-28 3-41, 4-1 1-1, 1-32, 2-8 2-27, 3-5, 3-21 3-22, 3-28, 4-14 4-26, 4-46, 4-45 5-21, 5-22, 5-46 5-41, 5-50 2-22, 2-23, 3-44 3-47, 3-48, 5-6 5-11, 5-25, 5-3	6 7 0 6 C4
20 21 22 23 24 25 26 27 28 29	C7 C55, C58 C3,C5,C14,C16	SILVER MICA VARICAP MYLAR ELECTROLYTIC ELECTROLYTIC ELECTROLYTIC	5%, 75PF 5%, 100PF 5%, 330PF 1%, 910PF 3.5/13PF 100V, .33µF 50V, 50µF 16V, 100µF 35V, 1000µF	DM15-101J DM15-331J DM15-911F 7S-TR1KO-02-3.5/13	CDE SPRAG SPRAG SPRAG		1 2 2 1 1 1 2 4 2	1-36 1-35 1-43, 1-48 1-39, 1-40 1-34 1-37 Bl.3, C8 DIE 1830 Bl, C8 B2.4, C8	C4 C4 C4 C4
1	NAVETEK®		/C MAIN BOARD 80		APPROVAL		NO. 1700-	-00-0178 010 sh_1_ of5	REV
								-	

102 mm

ITEM NO.	REF DESIG	DESCRIPTION	MFGR PART NO.	MFGR	WAVETEK PART/STOCK NO). OTY	STATION NO.	PREP NO.
	C23 C24 C25	CAPACITOR SET METAL POLYCARBON 100V, .01µf METAL POLYCARBON 100V, .1µf METAL POLYCARBON 100V, 1µf		WVTK		l set	Bag and ID	
34 35								
	CR1,CR2,CR3	DIODE 1N4002	1N4002	SMTH	4801-02-0001	4	1-13, 1-14, 1-15 1-16	5 .4
38 39	CR5,CR9,CR24 CR6,CR7,CR8 CR14,CR15,CR16 CR17,CR18,CR20 CR21,CR22,CR23 CR25, CR26		1N4581 FD6666	MICRO FCHLD	4801-01-4581 4807-02-6666		1-29, 3-12, 5-30 2-2, 2-4, 2-13 2-14,3-30,3-36 3-37, 3-38, 3-39 4-35, 4-36, 4-41 5-24, 5-32	9 .4
40	CR10,CR11 CR12,CR13	DIODE FD7777	FD7777	FCHLD	4807-02-0777	4	3-8, 3-9, 3-10 3-11	.4
42 43 44	101,102,104	INTEGRATED CIRCUITS OPERATIONAL AMPLIFIER	μΑ741 180-501-103	NAT WVTK	7000-07-4100		1-3, 1-26, 4-5 3-17	C4
46 47 48 48	106 1010 109 107 105	QUAD DIODE ARRAY + 2 DIODES	LM-318 CA3019 CA3054 CA3096AE	NAT RCA FCHLD FCHLD FCHLD	7000-03-1800 7000-30-1900 7000-30-5400	1 1 1 1	3-41 2-40/41 2-15/16 4-3/4	C4 BC2
		QUAD 2 INPUT WAND GATE	LM3900 7400	PCHLD	7000-39-0000 8000-74-0000	1	4-30/31	
55		TRANSISTOR WITH MTG KIT-TIP29	TIP29	т. і.	4902-00-0290	1		
57 58	01 028		TIP30 2N2219A 2N2905A	T.I. MOT FCHLD	4902-00-0300 4901-02-2191 4901-02-9050		5-39 5-35	C2A C2A
60	,029 ,06,07,08 ,02,03,04 ,022	MPS3638A	MPS3638A 2N3642	FCHLD FCHLD	4901-02-9030	3	1-6, 1-8, 1-11 1-19, 1-21, 1-23 3-26	C2
一	WAVETEK	TITLE P/C MAIN BOARD	•	DRAWN BY			-00-0178	REV
	PARTS LIST	MODEL 180		APPROVAL		180-	SH 2 OF 5	

MATCHED TRANSISTOR 2N3642 180-501-102 67 Q23,Q24 WVTK 4998-00-0011 set Bag and ID RESISTORS 70 R69,R74 METAL FILM 1/8W, 1%, 464Ω RN55D4640F CRNG 701-03-4640 1-38, 1-41 CARBON 1/2W, 5%, 3.9Ω RC20GF3R9J STKPL 700-25-0399 71 R41 6 1-9, 1-18, 5-36 1/2W, 5%, 10Ω RC20GF100J 72 R1,R3,R139 STKPL 4700-25-0100 R140,R141,R142 73 R121,R136,R138 5-38, 5-42, 5-49 4 2-24, 5-27, 5-34 1/8W, 1%, 21.5Ω RN55D21R5F 701-03-2159 METAL FILM CRNG 4 | 2-24, 5-27, 5-34 5-47 1 | 5-45 1 | 5-4 5 | 2-9, 2-28, 3-23 4-7, 5-33 2 | 5-44, 5-46 1 | 5-26 2 | 2-37, 2-39 2 | 2-44, 5-18 1/8W, 1%, 54.9Ω RN55D54R9F 1/8W, 1%, 78.7Ω RN55D78R7F 1/8W, 1%, 100Ω RN55D1000F 74 R147 METAL FILM CRNG 4701-03-5499 4701-03-7879 75 R22 METAL FILM CRNG CRNG 4701-03-1000 76 R67.R82.R94 METAL FILM R135,R149 77 R143,R144 METAL FILM 1/2W, 1%, 100Ω RN60D1000F CRNG 701-13-1000 1/8W, 1%, 150Ω RN55D1500F 1/8W, 1%, 165Ω RN55D1650F 1/8W, 1%, 249Ω RN55DR490F CRNG METAL FILM 4701-03-1500 79 R108,R109 METAL PILM 4701-03-1650 CRNG METAL FILM 701-03-2490 80 k105.k129 81 R2, R14, R92 METAL FILM 1/8W, 1%, 499Ω RN55D4990F CRNG 4701-03-4990 1-10, 1-20, 2-21 R104,R120,R126 R133,R145 82 R63 83 R33,R61, 2-49, 5-7, 5-8 5-16, 5-43 1/8W, 1%, 576Ω RN55D5760F 1/8W, 1%, 604Ω RN55D6040F 1 3-20 2 5-3, METAL FILM METAL FILM 4701-03-5760 CRNG 5-3, CRNG 4701-03-6040 3-4 84 R4,R5,R16 METAL FILM 1/8W, 1%, 1K RN55D1001F CRNG 4701-03-1011 12 1-4, 1-5, 1-24 R17,R71,R72 R79,R80,R86 1-25, 1-45, 1-46 2-1, 2-3, 2-6 2-18, 3-44, 3-45 R91,R114,R117 86 87 R95,R115,R116 METAL FILM 1/8W. 1%, 1.21K RN55D1211F 4701-03-1121 3 3-29, 3-42, 3-49 CRNG FITLE P/C MAIN BOARD NO. 1700-00-0178 REV WAVETEK" 180-010 PARTS LIST MODEL 180 WAVETEK REF DESIG DESCRIPTION MFGR PART NO. STATION NO. MFGR OTY PART/STOCK NO. 88 R60,R81,R84 METAL FILM 1/8W, 1%, 1.5K RN55D1501F CRNG 701-03-1501 2-12, 2-31, 2-32 .4 R93,R102,R113 2-45, 2-47, 3-1 3-43 R118 89 R89 ,R101 METAL FILM 1/8W, 1%, 1.78K RN55D1781F 2-19, 3-40 701-03-1781 90 R36, R130, R134 1/8W, 1%, 2K RN55D2001F 4-24, 5-15, 5-19 METAL FILM CRNG 701-03-2001 METAL PILM 1/8W, 1Z, 2.21K RN55D2211F CRNG 701-03-2211 3-33 METAL FILM 1/8W, 1%, 2.49K RN55D2491F 701-03-2491 2-5, 2-17

MFGR PART NO.

2N3903 2N3903

2N3905 2N3905

DESCRIPTION

TRANSISTOR

WAVETEK

PART/STOCK NO.

901-03-9030

4901-03-9050

4901-05-1390

STATION NO.

3-2, 3-3, 5-23

2-10, 2-11, 2-29 C2

2-30, 4-29, 4-40

4-48, 4-49, 4-50

5-2, 5-12

11

MFGR

FCHLD

FCHLD

Form 102

REF DESIG

63 Q15,Q17,Q26 64 Q9,Q10,Q11

Q21,Q25

Q12,Q13,Q14

Q18,Q19,Q20

NO. 62 Q27

CRNG 92 R87_R90 1/8W, 17, 3.01K RN55D3011F METAL FILM 93 R42,R83,R85 701-03-3011 2-25, 2-26, 4-18 CRNG METAL FILM 1/8W, 1%, 2.32K RN55D3321F 701-03-3321 1-27 95 R127 METAL FILM 1/8W, 1%, 3.65K RN55D3651F CRNG 5-13 701-03-3651 96 R6 97 R11,R12,R18 METAL FILM 1/8W, 1%, 3.92K RN55D3921F CRNG 701-03-3921 3 1-2, 1-12, 1-17 9 1-7, 1-22, 3-7 3-15, 3-24, 4-25 1/8W, 1%, 4.75K RN55D4751F 1/8W, 1%, 4.99K RN55D4991F CRNG METAL FILM 701-03-4751 98 R3,R15,R35 METAL FILM 4701-03-4991 R45, R54, R64 R68,R128,R132 4-19, 5-10, 5-29 99 R10 METAL FILM 1/8W, 1%, 6.19K RN55D6191F CRNG 701-03-6191 100 R97.R123 METAL FILM 1/8W, 1%, 6.81K RN55D6811F 1/8W, 1%, 7.87K RN55D7871F CRNG 701-03-6811 2 3-27, 5-14 2 3-34, 3-35 METAL FILM METAL FILM 101 R99,R100 701-03-7871 1/8W, 17, 8.25K RN55D8251F CRNG 701-03-8251 11-31 103 R24,R26,R31 R88,R96 METAL FILM 1/8W, 1%, 10K RN55D1002F CRNG 701-03-1002 5 2-20, 3-25, 4-33 .4 4-34, 5-1 METAL FILM 104 R28 1/8W, 1%, 10.5K RN55D1052F CRNG 701-03-1052 105 R70.R73.R75 METAL FILM 1/8W. 1%. 12.1K RN55D1212F CRNG 5 1-44, 1-47, 1-42 .4 4701-03-1212 R77,R112 1-50, 2-46 1 4-39 METAL FILM 1/8W, 1%, 13.1K RN55D1312F CRNG 701-03-1312 107 R38,R62 METAL FILM 1/8W, 1%, 15K RN55D1502F CRNG 701-03-1502 3-19, 4-23 1 4-44 3 3-6, 3-13, 5-17 2 2-36, 2-42 2 2-33, 2-34 108 R29 METAL FILM 1/8W, 1%, 21.5K RN55D2152F CRNG 701-03-2152 109 R44, R53, R131 1/8W, 1%, 24.9K RN55D2492F METAL FILM CRNG 701-03-2492 110 R106, R110 METAL FILM 1/8W, 1%, 30.1K RN55D3012F CRNG 701-03-3012 111 R107,R111 METAL FILM 1/8W, 1%, 33.2K RN55D3322F CRNG 701-03-3322 112 R32, R65 METAL FILM 1/8W, 1%, 49.9K RN55D4992F CRNG 701-03-4992 2 3-16, 4-37 113 R27, R30, R124 METAL FILM 1/8W, 1%, 100K RN55D1003F CRNG 701-03-1003 3 4-43, 4-45, 5-28 1/8W, 1%, 221K RN55D2213F 114 R37 METAL FILM CRNG 701-03-2213 1 4-22 115 R76 METAL FILM 1/8W, 1%, 237K RN55D2373F CRNG 701-03-2373 1 1-49 116 R23,R57 CARBON 1/2W, 10%, 470K RC20GF474K STACK 700-25-4703 2 4-2, 4-32 2 4-8, 4-10 117 R48, R52 CARBON 1/2W, 5%, 1M RC20GF105J STACK 700~25-1004 118 R49 CARRON 1/2W, 5%, 10M RC20GF106J STACK 700-25-1005 MATCHED RESISTORS 120 R50, R51, R55, R56 METAL FILM 1/8W, 1%, 4.99K 180-501-100 WVTK 4789-00-0039 set Bag and ID DRAWN BY NO. 1700-00-0178 TITLE P/C MAIN BOARD REV WAVETEK® 180-010 APPROVAL MODEL 180 **PARTS LIST**

ITEM NO.	REF DESIG	DESCRIPTION	MFGR PART NO.	MFGR	WAVETEK PART/STOCK NO). ОТҮ	STATION NO.	PREP NO.
NO. 121 122 123 124 125 126 127 128 130 131 132 133 134 135 136 137	REF DESIG R19,R20 R103 R9,R66,R78 R39 R43 R47,R125	1/8W, 17, 10K 1/8W, 17, 10K 1/8W, 17, 10K 1/8W, 17, 10K 1/8W 1/8W, 17, 10K 1/8W	WVTK BECK BECK		1 set	STATION NO. Bag and ID 2-48 1-30, 2-7, 3-18 4-27 4-6 4-11, 5-37		
	V∕AVETEK' PARTS LIST	TITLE P/C MAIN BOARD MODEL 180		DRAWN BY			0-00-0178 -010 sh_5_of_5_	REV

NO.	REF DESIG	DESCRIPTION	MFGR PART NO.	MFGR	WAVETEK PART/STOCK NO	ату	STATION NO.	PREP
1 2 3 4 5		SILKSCREEN ASSY PRINT PRINTED CIRCUIT BOARD SCHEMATIC	180-010 180-110 180-210	WVTK WVTK WVTK	0001-00-0178 1703-00-0178 0002-00-0178	1		
6 7 8 9 10 11 12 13 14 15	C38, C44 C49 C62 C10 C39, C57 C41, C46 C15, C61 C4, C6, C8 C9, C11, C12 C18, C28, C29 C34, C60, C37 C47, C50, C51	CERAMIC DISC	OPF DD221 OPF DD331	CRL CRL CRL CRL CRL CRL CRL CRL		1 2 2 2	3-50, 5-5 5-9 2-50 4-38, 4-28 3-14, 4-1 1-1, 1-32, 2-8 2-27, 3-5, 3-21 3-22, 3-28, 4-1 4-26, 4-46, 4-4 5-21, 5-22, 5-4	.6 7
16 17 18	C56, C59 C35, C42, C43 C45, C48, C52 C53, C54, C36	CERAMIC DISC 20V, .	Ար ք Մ К20–104	CRL		9	5-41, 5-50 2-22, 2-23, 3-4 3-47, 3-48, 5-6 5-11, 5-25, 5-3	6 C4
19 20 21 22 23 24	C20 C21 C30, C33 C31, C32 C22 C19	SILVER MICA 5%, 7: SILVER MICA 5%, 10: SILVER MICA 5%, 30: SILVER MICA 1%, 91: VARICAP 3.5/1:	RPF DM15-680J RPF DM15-750J RPF DM15-101J RPF DM15-331J RPF DM15-911F RPF 7STR1KO-02-3.5/13			1 2 2 1	1-36 1-35 1-43, 1-48 1-39, 1-40 1-34	C4 C4 C4 C4 C4
28 29	C55, C58 C3,C5,C14,C16 C1, C2	ELECTROLYTIC 50V, 50 ELECTROLYTIC 16V, 100 ELECTROLYTIC 35V, 1000	рд WMF-1P33 рд 500D506G050DD7 рд 500D107G016DC7 рд 39D108G035GL4	CDE SPRAG SPRAG SPRAG		2 4	B1.3, C8 DIE 1830 B1, C8 B2.4, C8	
	VAVETEK®	MODEL 180LF		APPROVAL		0. 180LE 700-00-		REV

ITEM NO.	REF DESIG	DESCRIPTION	MFGR PART NO.	MFGR	WAVETEK PART/STOCK N	ο στν	STATION NO.	PREI
32 33 34 35	C23	CAPACITOR SET METAL POLY CARBON 100V, .01µf	130-501-6	WVTK	VALUE OF A			JNO.
36	C24 C25 C26, C27	METAL POLY CARBON 100V, 1µf METAL POLY CARBON 100V, 1µf METAL POLY CARBON 100V, 5µf	150-301-0	MAIK		1/sei	Bag and ID	
37	CR1, CR2 CR3, CR4	DIODE 1N4002	1N4022	SMITH	4801-02-0001	4	1-13, 1-14, 1-1	15 .4
	CR5, CR9, CR24 CR6, CR7, CR8 CR14, CR15, CR16 CR17, CR18, CR20 CR21, CR22, CR23 CR25, CR26			MICRO FCHLD	4801-01-4581 4807-02-6666	3 14	1-16 1-29, 3-12, 5-1 2-2, 2-4, 2-13 2-14, 3-30, 3-1 3-37, 3-38, 3-3 4-35, 4-36, 4-4	36 39
40 41 42	CR10, CR11 CR12, CR13	DIODE FD7777	FD7777	FCHLD	4807-02-0777	4	5-24, 5-32 3-8, 3-9, 3-10 3-11	.4
43		INTEGRATED CIRCUITS		}				
44 45	IC1, IC2, IC4 IC6	OPERATIONAL AMPLIFIER	μΑ741 180-501-103	NAT WVTK	7000-07-4100	3	1-3, 1-26, 4-5 3-17	
46 47 48 49	IC10 IC9 IC7 IC5	QUAD DIODE ARRAY + 2 DIODES	LM-318 CA3019 CA3054 CA3096AE	NAT FCHLD FCHLD FCHLD	7000-03-1800 7000-30-1900 7000-30-5400	1 1 1	3-41 2-40/41 2-15/16	C4 C4 BC2
50 51 52 53	IC3 IC8		LM3900 7400	FCHLD FCHLD	7000-39-0000 8000-74-0000		4-3/4 4-30/31	
54		TRANSISTOR		I				
56 57	Q5 Q1	WITH MTG KIT-TIP29 WITH MTG KIT-TIP30	TIP29 TIP30	T.I.	4902-00-0290 4902-00-0300	1 1		
59	Q28 Q29 Q6, Q7, Q8	2N2219A 2N2905A MPS3638A	2N2219A 2N2905A	MOT	4901-02-2191 4901-02-9050	1	5-39 5-35 1-6, 1-8, 1-11	C2A C2A C2
$\overline{\nabla}$	VAVETEK®	TITLE P/C Main Board		DRAWN BY	L	vo.		REV
	PARTS LIST	MODEL 180LF		APPROVAL		180L 1700-00	F-010 -0179 sH2 _{OF} 5	

ITEM NO.	REF DESIG		DESCRIPTION	MFGR PART NO.	MFGR	WAVETEK PART/STOCK NO	о. ОТҮ	STATION NO.	PREP NO.
61	Q2, Q3, Q4 Q22	·	2N3642	2N3642	FCHLD	4901-03-6420	4	1-19, 1-21, 1-2 3-26	23 C2
62	Q27		2N3903	2N3903	FCHLD	4901-03-9030	1	1	C2
63	Q15, Q17, Q26	ł	2N3905	2N3905	FCHLD	4901-03-9050		3-2, 3-3, 5-23	
64	Q9, Q10, Q11 Q12, Q13, Q14 Q18, Q19, Q20 Q21, Q25		2N5139	2N5139	FCHLD	4901-05-1390		2-10, 2-11, 2-2 2-30, 4-29, 4-4 4-48, 4-49, 4-5 5-2, 5-12	29 C2 40
65					1	į		,	
66		MATCHED TRA			I				1
67 68	Q23, Q24		2N3642	180-501-102	WVTK	4998-00-0011	1/set	Bag and ID	C2
69					1				
		RESISTORS	_				Į		
70 71		METAL FILM	1/8W, 1%, 464Ω		CRNG	4701-03-4640	2	1-38, 1-41	.4
	R41	CARBON	1/2W, 5%, 3.9Ω		STKPL	4700-25-0399	1	4-17	1.5
72	R1, R3, R139		10Ω	RC20GF100J	STKPL	4700-25-0100	6	1-9, 1-18, 5-36	5 .5
	R140,R141,R142				I		1	5-38, 5-42, 5-4	
	R121,R136,R138 R146	METAL FILM	1/8W, 1%, 21.5Ω	RN55D21R5F	CRNG	4701-03-2159	4	2-24, 5-27, 5-3 5-47	34 .4
	R147	METAL FILM	1/8W, 1%, 54.9Ω	RN55D54R9F	CRNG	4701-03-5499	1	5-45	.4
75	R22	METAL FILM	1/8W, 1%, 78.7Ω		CRNG	4701-03-7879		5-4	1.4
76	R67, R82, R94 R135, R149	METAL FILM	1/8W, 1%, 100Ω	RN55D1000F	CRNG	4701-03-1000	5	2-9, 2-28, 3-23 4-7, 5-33	3 .4
77	R143, R144	METAL FILM	1/2W, 1%, 100Ω	RN60D1000F	CRNG	4701-13-1000	1 2	5-44, 5-46	.7
78	R137	METAL FILM				4701-03-1500		5-26	.4
79	R108, R109	METAL FILM	1/8W, 1%, 165Ω		CRNG	4701-03-1650		2-37, 2-39	.4
80	R105, R129	METAL FILM	1/8W, 1%, 249Ω		CRNG	4701-03-2490		2-44, 5-18	4
	R2, R14, R92	METAL FILM	1/8W, 1%, 499Ω		CRNG	4701-03-4990		1-10, 1-20, 2-2	
	R104,R120,R126 R133, R145						ľ	2-49, 5-7, 5-8 5-16, 5-43	1.7
82	R63	METAL FILM	1/8W, 1%, 576Ω	RN55D5760F	CRNG	4701-03-5760	1	3-20	1.4
83	R33, R61,	METAL FILM	1/8W, 1%, 604Ω			4701-03-6040	2	5-3, 3-4	
	R4, R5, R16 R17,R71,R72 R79,R80,R86 R91,R114,R117	METAL FILM	1/8W, 1%, 1K	RN55D1001F	CRNG	4701-03-1011	12	1-4, 1-5, 1-24 1-25, 1-45, 1-4 2-1, 2-3, 2-6,	1 1
85	m/49K1179K11/							2-18, 3-44, 3-4	5
	VAVETEK	TITLE	P/C Main Board	 	DRAWN BY	· I	NO.	OLF-010	REV
	PARTS LIST	MODEL	180LF		APPROVAL			00-0179 3 5 SH OF	

NO.	REF DESIG		DESCRIPTION	MFGR PART NO.	MFGR	WAVETEK PART/STOCK NO	ο. ατγ	STATION NO.	PREP NO.
86									,
87	R95,R115,R116	METAL FILM	1/8W, 1%, 1.21K	RN55D1211F	CRNG	4701-03-1121	3	3-29, 3-42, 3-4	اه اه
88	R60,R81,R84	METAL FILM	1/8W, 1%, 1.5K		CRNG	4701-03-1501		2-12, 2-31, 2-3	
	R93,R102,R113	l	• • •				'	2-45, 2-47, 3-1	
	R118	İ		l	1		1	3-43	١.
	R89, R101	METAL FILM	1/8W, 1%, 1.78K	RN55D1781F	CRNG	4701-03-1781	2	2-19, 3-40	.4
90	R36,R130,R134	METAL FILM	1/8W, 1%, 2K	RN55D2001F	CRNG	4701-03-2001	3	4-24, 5-15, 5-1	
	R98	METAL FILM	1/8W, 1%, 2.21K	RN55D2211F	CRNG	4701-03-2001		3-33	.4
	R87, R90	METAL FILM	1/8W, 1%, 2.49K	RN55D2491F	CRNG	4701-03-2491		2-5, 2-17	1.4
	R42,R83,R85	METAL FILM	1/8W, 1%, 30.1K	RN55D3011F	CRNG	4701-03-3011		2-25, 2-25, 4-1	
	R7	METAL FILM	1/8W, 1%, 3.32K	RN55D3321F	CRNG	4701-03-3321		1-27	.4
	R127	METAL FILM	1/8W, 1%, 3.65K	RN55D3651F	CRNG	4701-03-3651		5-13	.4
1	R6	METAL FILM	1/8W, 1%, 3.92K	RN55D3921F	CRNG	4701-03-3921	1	1-28	. 4
	R11,R12,R18	METAL FILM	1/8W, 1%, 4.75K	RN55D4751F	CRNG	4701-03-4751	3	1-2, 1-12, 1-17	
	R3,R15,R35	METAL FILM	1/8W, 1%, 4.99K	RN55D4991F	CRNG	4701-03-4991		1-7, 1-22, 3-7	
	R45, R54, R64				1	1		3-15, 3-24, 4-2	
	R68,R128,R132				1	1	1	4-19, 5-10, 5-2	
	R10	METAL FILM	1/8W, 1%, 6.19K	RN55D6191F	CRNG	4701-03-6191	1	1-33	.4
	R97, R123	METAL FILM	1/8W, 1%, 6.81K	RN55D6811F	CRNG	4701-03-6811		3-27, 5-14	.4
	R99, R100	METAL FILM	1/8W, 1%, 7.87K	RN55D7871F	CRNG	4701-03-7871		3-34, 3-39	.4
	R8	METAL FILM	1/8W, 1%, 8.25K	RN55D8251F	CRNG	4701-03-8251	1	1-31	.4
103	R24,R26,R31	METAL FILM	1/8W, 1%, 10K	RN55D1002F	CRNG	4701-03-1002	5	2-20, 3-25, 4-3	
	R88, R96				1	İ		4-34, 5-1	1
	R28	METAL FILM	1/8W, 1%, 10.5K	RN55D1052F	CRNG	4701-03-1052	1	4-42	.4
	R70,R73,R75	METAL FILM	1/8W, 1%, 12.1K	RN55D1212F	CRNG	4701-03-1212	5	1-44, 1-47, 1-4	2 .4
	R77, R112				1			1-50, 2-46	1
	R25	METAL FILM	1/8W, 1%, 13.1K		CRNG	4701-03-1312	1	4-39	.4
	R38, R62	METAL FILM	1/8W, 1%, 15K		CRNG	4701-03-1502	2	3-19, 4-23	.4
	R29	METAL FILM	1/8W, 1%, 21.5K		CRNG	4701-03-2152	1	4-44	.4
	R44,R53,R131	METAL FILM	1/8W, 1%, 24.9K		CRNG	4701-03-2492	3	3-6, 3-13, 5-17	.4
	R106, R110	METAL FILM	1/8W, 1%, 30.1K		CRNG	4701-03-3012	2	2-36, 2-42	.4
	R107, R111	METAL FILM	1/8W, 1%, 33.2K		CRNG	4701-03-3322	2	2-33, 2-34	.4
	R32, R65	METAL FILM	1/8W, 1%, 49.9K		CRNG	4701-03-4992	2	3-16, 4-37	.4
	R27,R30,R124	METAL FILM	1/8W, 1%, 100K			4701-03-1003	3	4-43, 4-45, 5-2	8 .4
	R37	METAL FILM	1/8W, 1%, 221K		CRNG	4701-03-2213	1	4-22	.4
	R76		1/8W, 1%, 237K		CRNG	4701-03-2373	1	1-49	.4
	R23, R57	CARBON	1/2W, 10%, 470K		STKPL	4700-25-4703	2	4-2, 4-32	.5
117	R48, R52	CARBON	1/2W, 5%, 1M	RC20GF105J	STKPL	4700-25-1004	2	4-8, 4-10	.5
$\overline{}$	VAVETEK	TITLE	P/C Main Board		DRAWN BY	·	NO. 18	OLF-010	REV
		1			APPROVAL			00-0179 , _	
	PARTS LIST	MODEL	180LF		PEROVAL	i	1100-	SH4bF_5	ı

ITEM NO.	REF DESIG	DESCRIPTION	MFGR PART NO.	MFGR	WAVETEK PART/STOCK NO.	ОТУ	STATION NO.	PREP NO.
118 119	R49	CARBON 1/2W, 5%, 10M MATCHED RESISTORS	RC20GF106J	STKPL	4700-25-1005	1	4-9	.5
120	R50,R51,R55,R56	METAL FILM 1/8W, 1%, 4.99K	180-501-1000	WVTK	4789-00-0039	1	Bag and ID	
121	R19,R20	METAL FILM 1/8W, 1%, 10K		WVTK	4789-00-0039		Bag and ID	.4
122	R103		91AR-200	BECK	4600-12-2010		2-48	C8
123	R9,R66,R78		91AR-1K	BECK	4600-12-1020		1-30, 2-7, 3-18	
124	R39		91AR-2K	BECK	4600-12-2020		4-27	C8
125	R43		91AR-10K	BECK	4600-12-1030		4-6	C8
126	R47,R125	100K	91AR-100K	BECK	4600-12-1040		4-11, 5-37	C8
127			·				1, 5 57	
128			ì	1	1	İ		
129							ļ	1 1
130		TRANSIPADS	10160	ROSS	2800-11-0004	2		
131		HEATSINK	NF207	WAKFLD	2800-11-0001	3		1 1
132		14 PIN DIP SOCKET	14 DIP	ROBNUG	2100-03-0011	1	3-31/32	1 1
133		SWITCH DETENT (180-400)	180-313	WVTK	5104-99-0022	1		1 1
134		SWITCH DETENT (180-400)	180-314	WVTK	5104-99-0023	1		1 1
135		WAFER	147-400	WVTK	5104-02-0015	5		1 1
136	R21	POT	JK1303	CTS	4600-06-1039	1		1 1
137	R34,R122	POT/SWITCH (GH1879)	180-3	WVTK		2		1 1
138		SOLDER LUG	1497		2100-04-0012	2		
139	R119	POT AMPLITUDE	180-401	WVTK	4600-06-1023	1		1 1
140	. ·] '		1 1
				İ				
1						1		
1								
							i	
	ĺ			•				
	VAVETEK [®]	TITLE P/C Main Board		DRAWN BY	^^	Ю. ₁₈₀₁ 1700-00	F-010 -0179	REV
	PARTS LIST	MODEL 180LF		APPROVAL			SH 5 OF 5	