



S1 SHCC componenten - layout

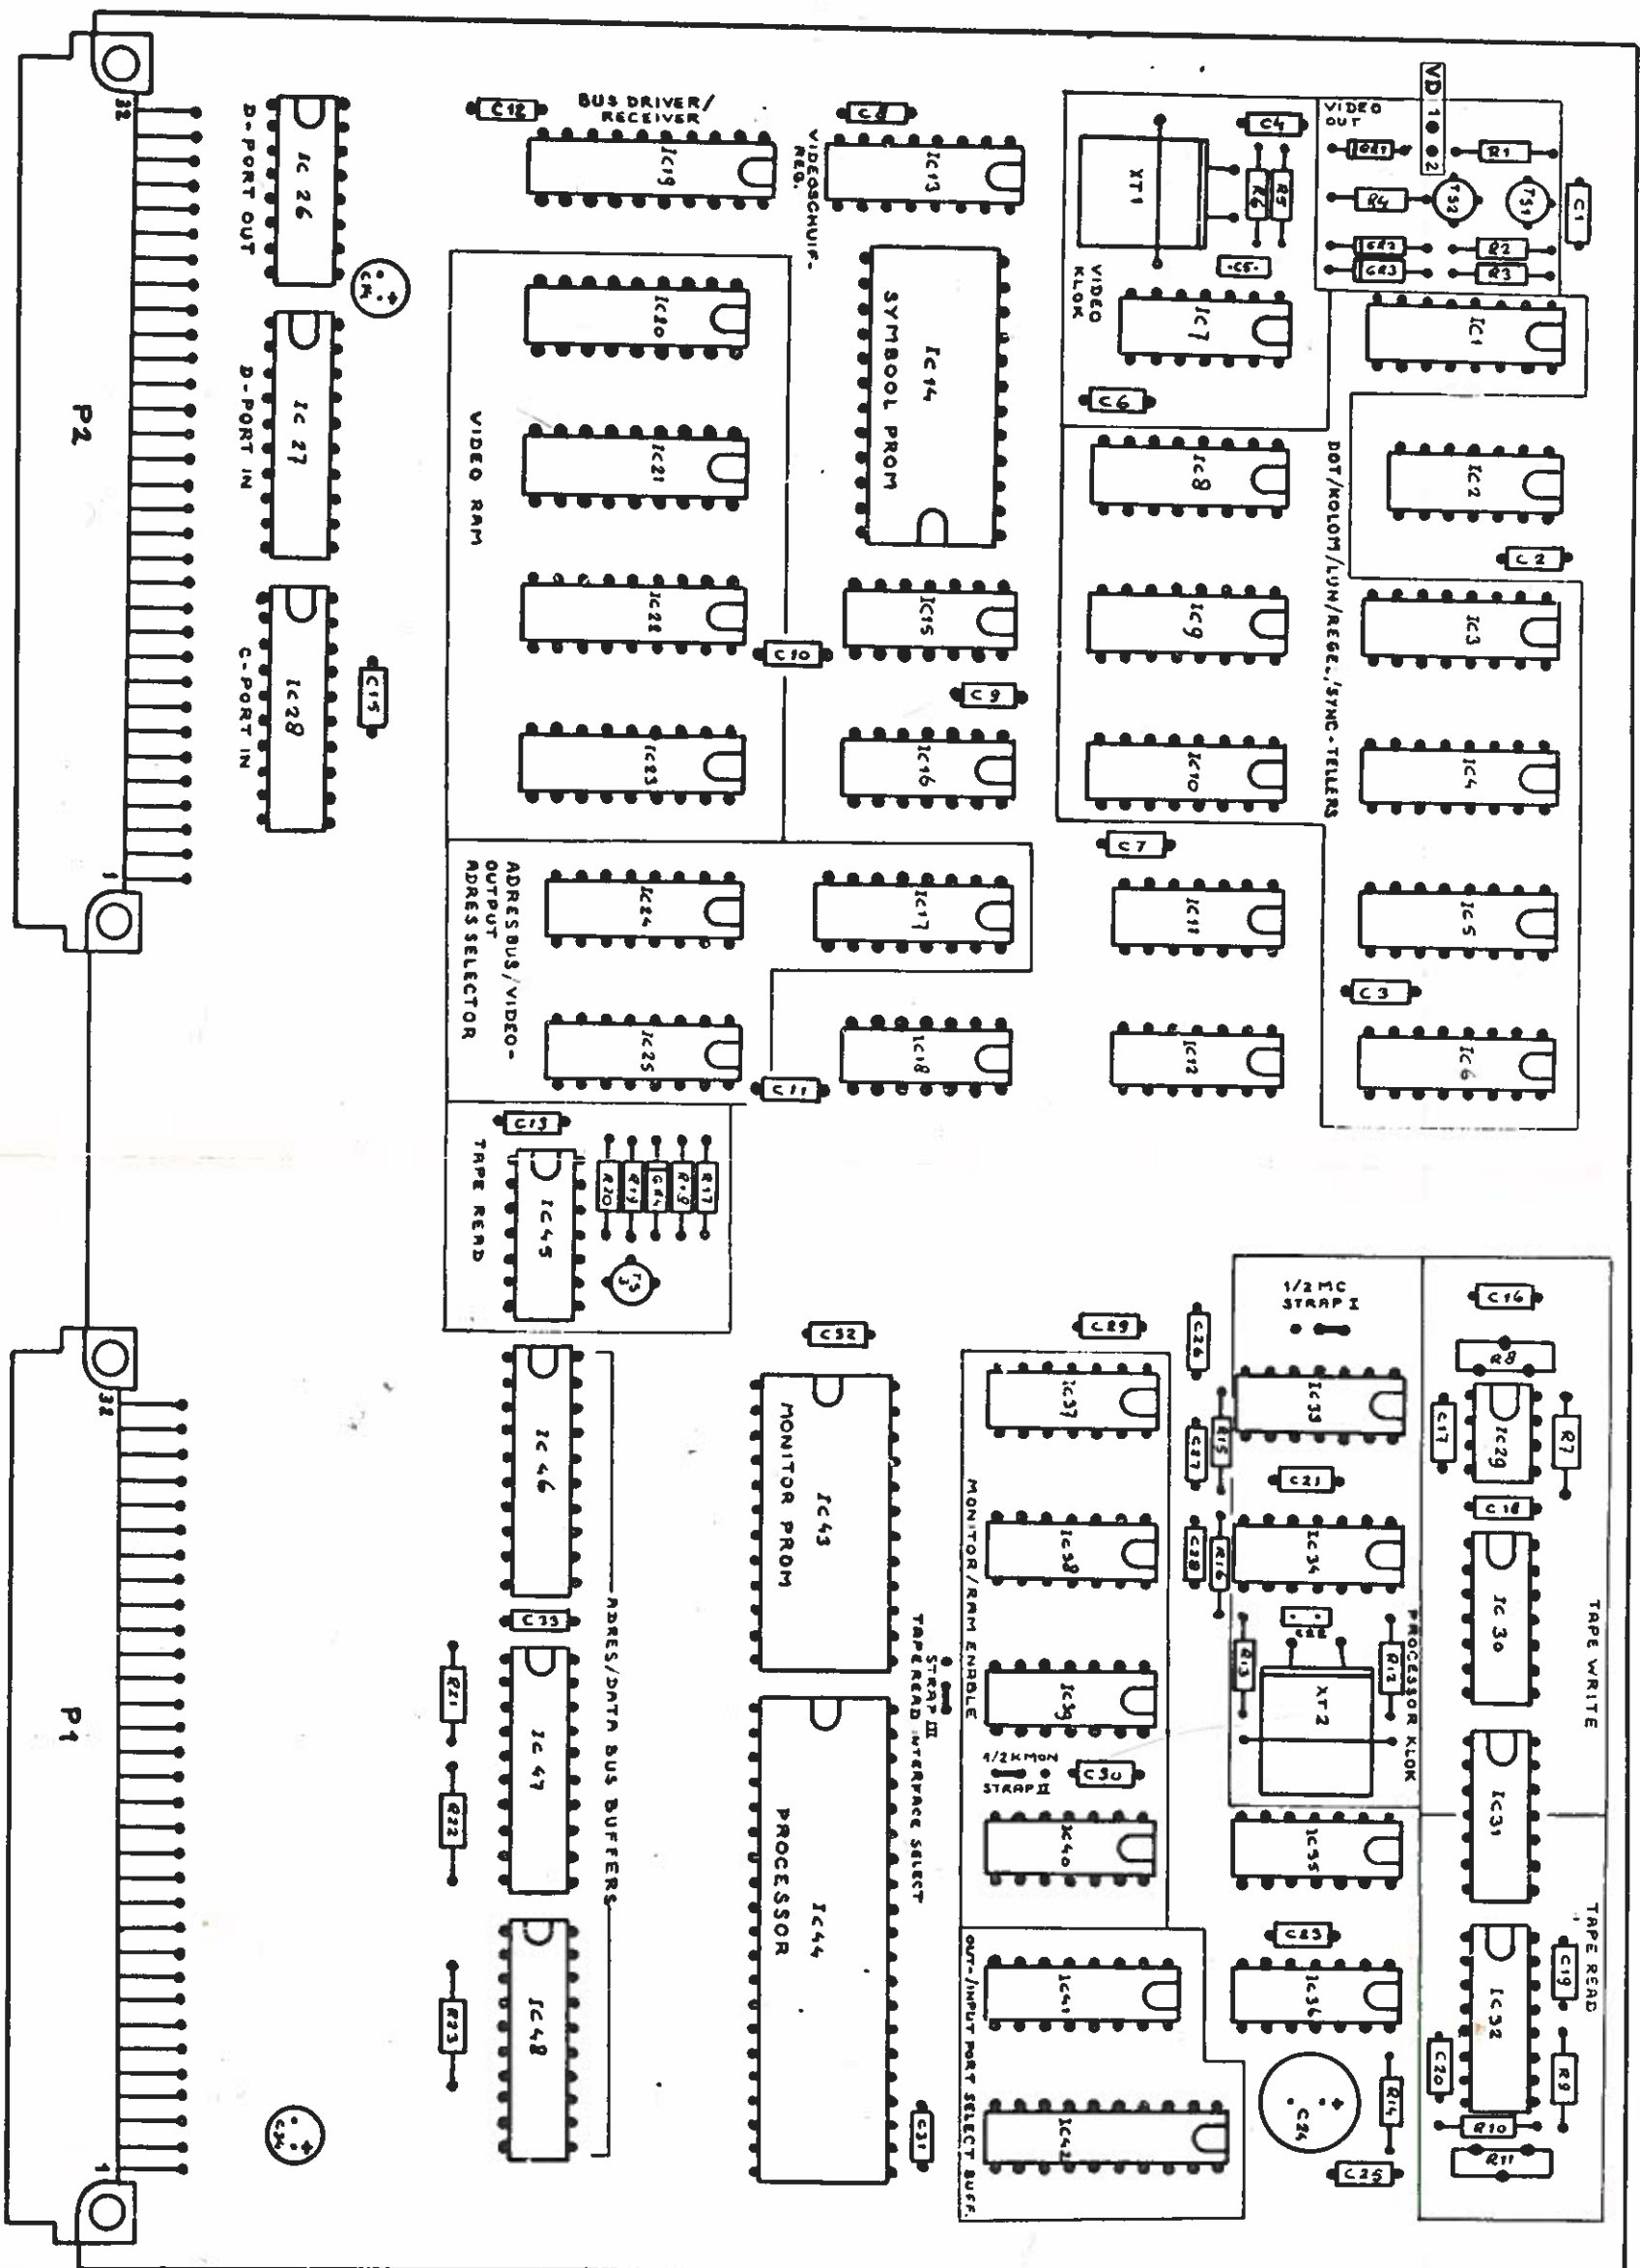

S1 SHCC video circuit

blad datum

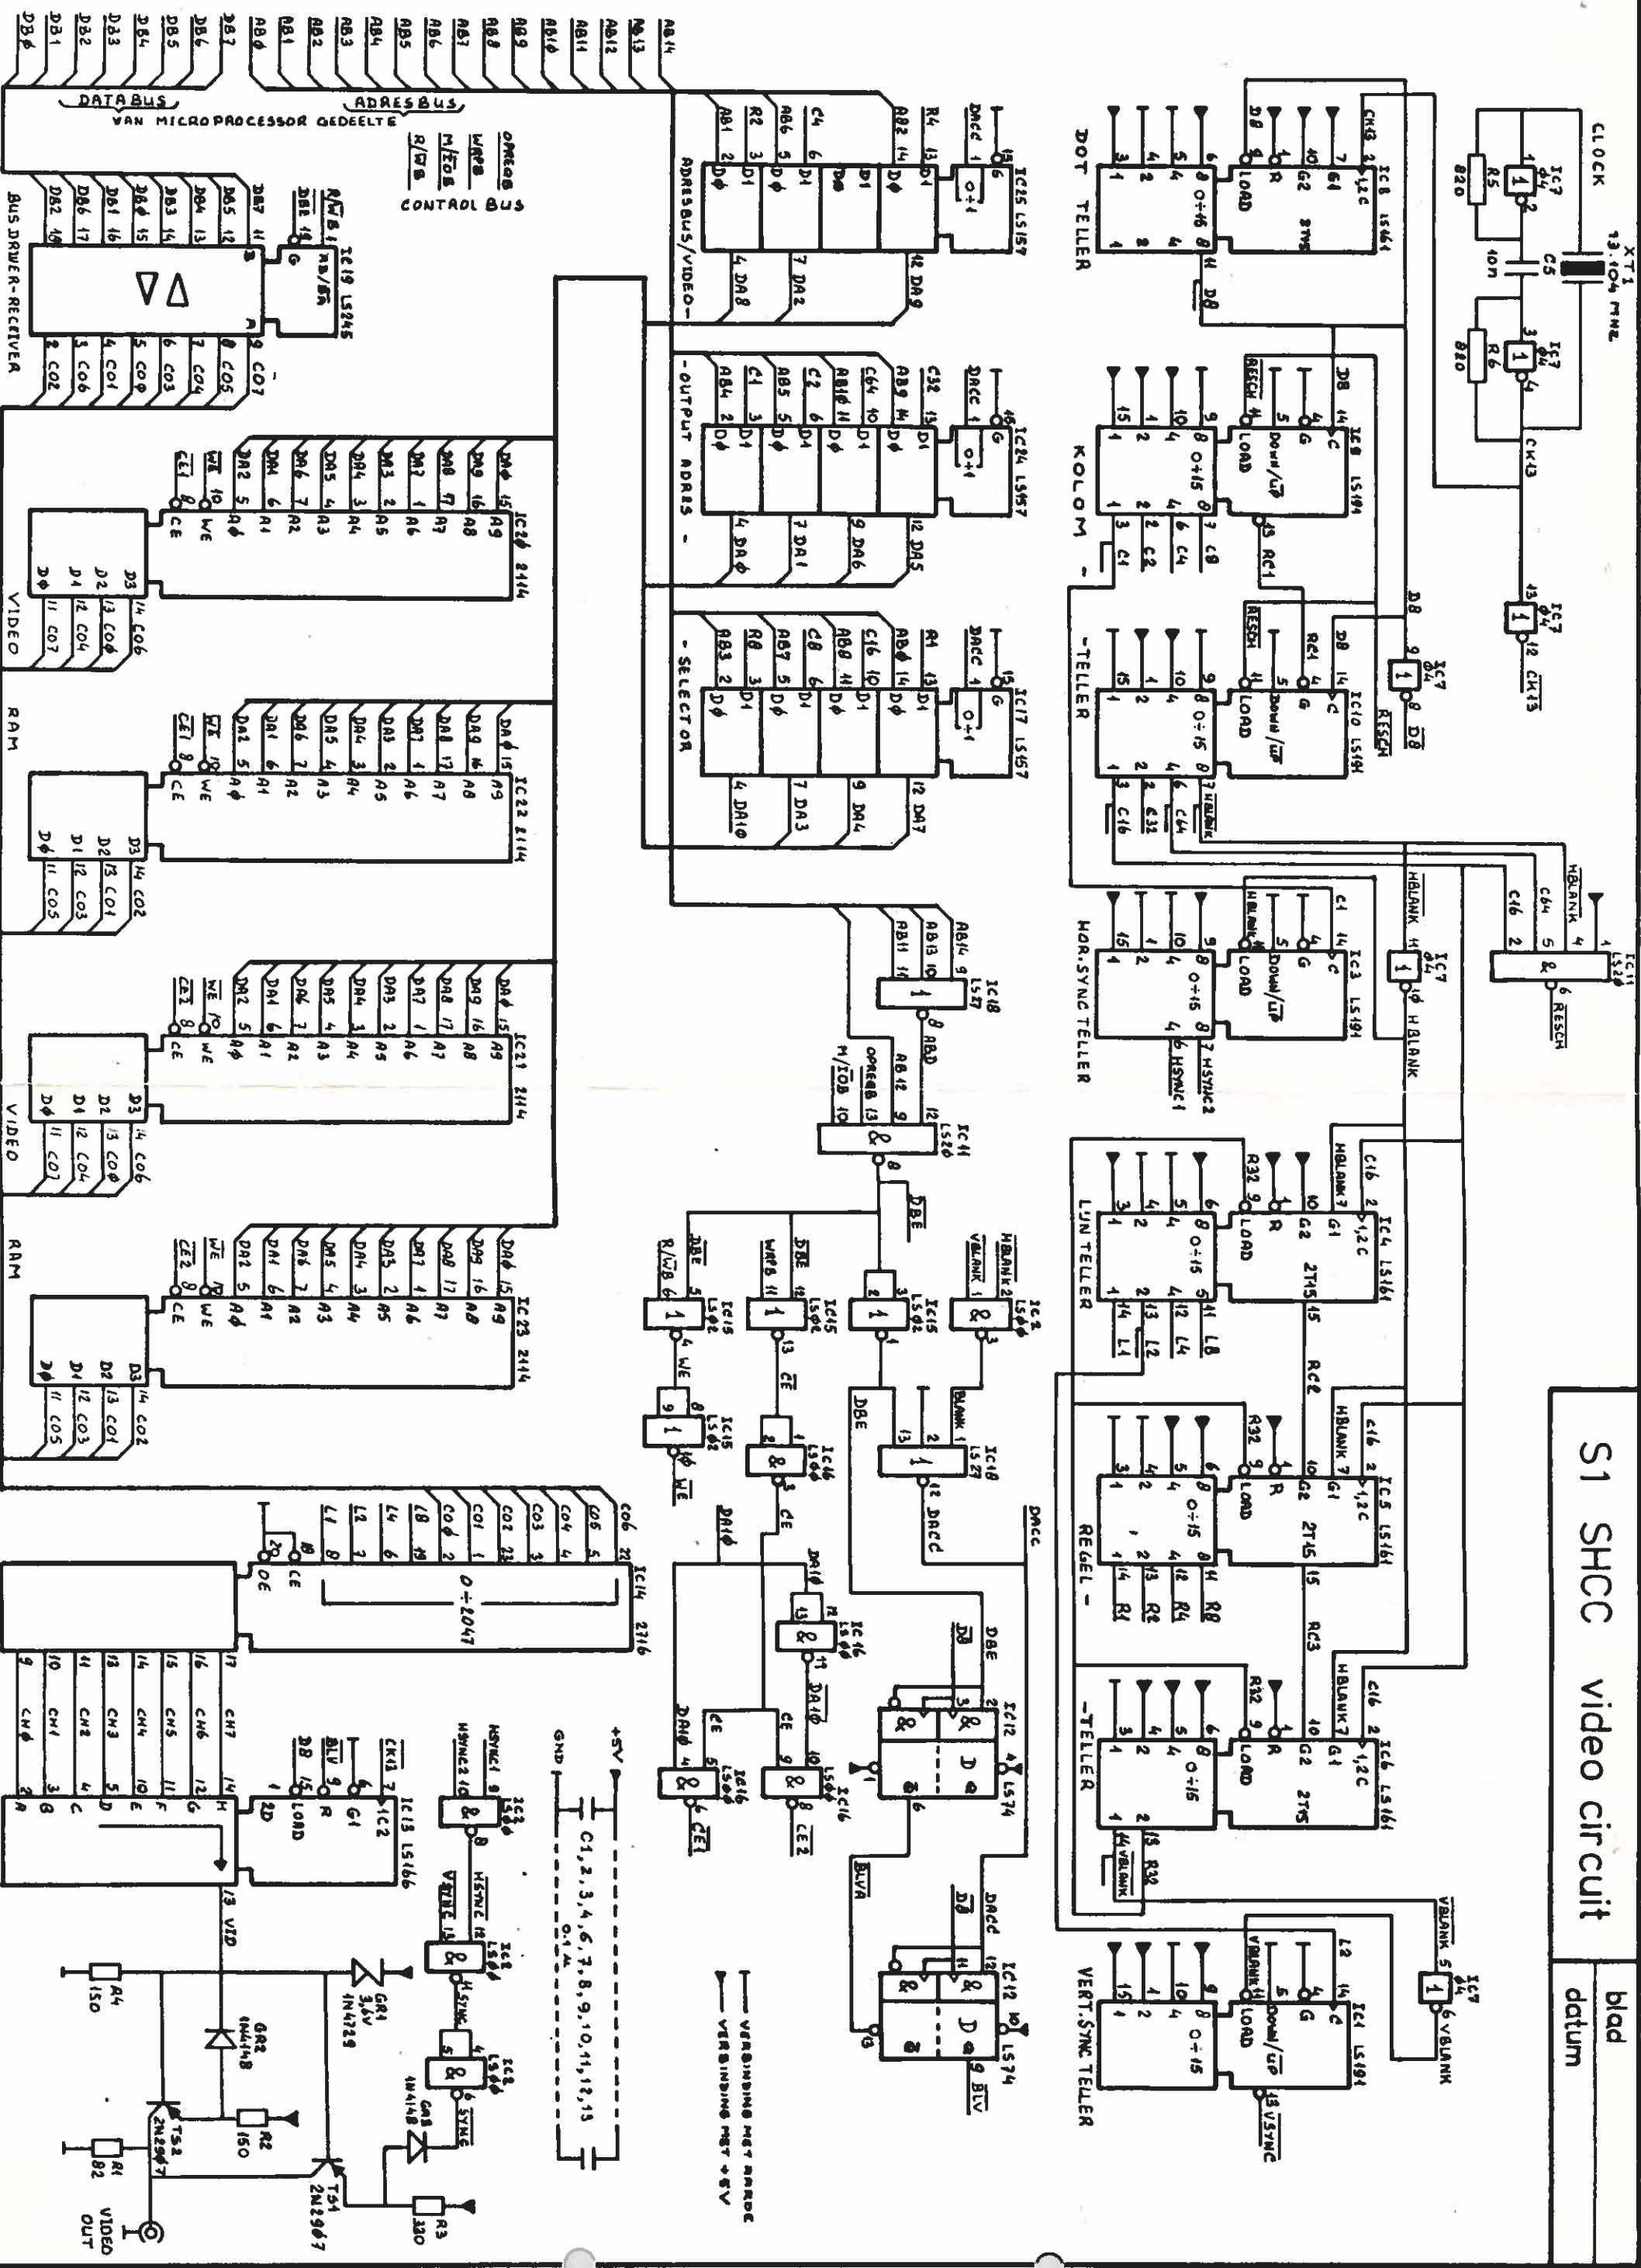

SHCC

S1 SHCC achterbordbedrading - tabel

SHCC-SIG6 84.04

[illegible]

PROCESSOR- KAART P. plug VD: video uit	PROCESSOR PLUGGAT ONSTELLING	VOEDING	GENEUGEN- KAART P. plug	CD - CASSETTEDECK KB - KEYBOARD VDU - MONITOR EHB - EXT. HARDW. BESTURING	GRAPHICS KAART MC - CONNECTOR
P1a 2		+ 5V			
P1a 3		0V			
P1a 9	□	✓			
P1a 12				EHB - RESET - 1	toetsen Bord 12
P1a 13	■	✓			
P1a 14		✓			✓ a 2
P1a 16		✓			✓ c13
P1a 17				Mon. out 1	
P1a 21		0V			
P1a 22	✓				a 3
P1a 23	✓		P1b 18 ✓		
P1a 25	✓				c10
P1a 30		0V			
P1a 31		+ 5V			
		0V	P1a 1		
		0V	P1a 2		
		+ 5V	P1a 3		
		+ 5V	P1a 4		
		0V	P1a 5		
		0V	P1a 9		
		0V	P1a 11		
		0V	P1a 13		
		0V	P1a 19		
		0V	P1a 22		
		0V	P1a 25		
		0V	P1a 28		
		0V	P1a 31		
		0V	P1a 32		
P2a 1	✓		P2a 14 ✓		
P2a 2		+ 5V			
P2a 3		0V			
P2a 4					
P2a 5					✓ a32
P2a 6					c32
P2a 7					a15
P2a 8					a16
P2a 9					a17
P2a 10					a18
P2a 11					a19
P2a 12					a20
P2a 13	✓		P1b14-P1b16 ✓		a21
P2a 14					a22
P2a 15					a23
P2a 16					a24
P2a 17					a25
P2a 18					a26
P2a 19					a27
P2a 20					a28
P2a 22				EHB - Vid. Sel. Switch - 1	
P2a 23	✓				✓ a14
P2a 24				CD AARDE	
P2a 25				CD AARDE	
P2a 26	✓				✓ a29
					GR RAM CTL
P2a 29		0V		CD AAN/UIT	
P2a 30		+ 5V			
P2a 31					
P2a 32	□			VDU - AARDE	(a/c 51)
VD 1	□				
		0V	P2a 1		
		0V	P2a 2		
		0V	P2a 5		
		0V	P2a 9		
		+ 5V	P2a 10	✓	
		0V	P2a 11		
		0V	P2a 13		
		+ 5V	P2a 14		
		0V	P2a 15		
		0V	P2a 17		
		0V	P2a 22		
		+ 12V	P2a 23		
		+ 12V	P2a 24		
		+ 12V	P2a 25		
		+ 12V	P2a 26		
		+ 5V	P2a 27		
		+ 5V	P2a 28		
		+ 5V	P2a 29		
		+ 5V	P2a 30		
		0V	P2a 31		
		0V	P2a 32		
		0V		EHB - RESET - 2	